

Part Numbers in Alphanumeric Order

○ : NUMBER □ : LETTER

	Part Number	Page	Description
A GRADES	HPBT% ○○○○-○○○	F28	2-Edge Tip-Bars (Back Boring)
	HPFG% ○○○○-○○	G47	2-Edge Tip-Bars (Internal Face Grooving)
	HPG% ○○○○-○○	G36	2-Edge Tip-Bars (Internal Grooving)
	HPTR ○○○○○-○○-○○○	J14	2-Edge Tip-Bars (Internal Threading)
	HS3X4	F32,F34,P2	Spare Parts (Screw)
	HS3X4P	F20,F22,F25,P2	Spare Parts (Screw)
B INSERTS	HS4X4P	F20,F22,F25,P2	Spare Parts (Screw)
	HS6X4P	F62,G42,P2	Spare Parts (Screw)
	HSB4X8%	E17-E19,E22,E24,E30,P2	Spare Parts (Screw)
C CBN & PCD	J		
	JCET ○○○○○(○)M%-F	B22	Insert (Turning)
	JCET ○○○○○(○)M%-FSF	B22	Insert (Turning)
	JCET ○○○○○(○)M%-FSF	B22	Insert (Turning)
	JCGT ○○○○○(○)M%-F	B22	Insert (Turning)
	JCGT ○○○○○(○)M%-F	B22	Insert (Turning)
E TURNING	K		
	KCG ○○○○%	G25	Insert (Grooving) / Cera-Notch
	KCGP ○○○○%	G25	Insert (Grooving) / Cera-Notch
	KCRP ○○○○%	G25	Insert (Grooving) / Cera-Notch
	KCT ○%	J26	Insert (Threading) / Cera-Notch
	KCTK ○%	J26	Insert (Threading) / Cera-Notch
F BORING	KCTP ○%	J26	Insert (Threading) / Cera-Notch
	KGBA% ○○-○	G12	Toolholder (Grooving)
	KGBA% ○○-○-○○(□)	G12	Toolholder (Grooving)
	KGBA% ○○○○□-○○	G12	Toolholder (Grooving)
	KGBA% ○○○○□22-○○	G12	Toolholder (Grooving)
	KGBA% ○○○○□22-○○T5	G12	Toolholder (Grooving)
G GROOVING	KGBAS% ○○-○	G13	Toolholder (Grooving)
	KGBAS% ○○-○-○○	G13	Toolholder (Grooving)
	KGBAS% ○○○○□-○○	G13	Toolholder (Grooving)
	KGBAS% ○○○○□22-○○	G13	Toolholder (Grooving)
	KGBAS% ○○○○□22-○○T5	G13	Toolholder (Grooving)
	KGD% ○(○)-○(○)JX	G19,H16	Toolholder (Grooving / Cut-Off)
H CUT-OFF	KGD% ○○-○D○○JX	G19,H16	Toolholder (Grooving / Cut-Off)
	KGD% ○○-○TOO	G20,H17	Toolholder (Grooving / Cut-Off)
	KGD% ○○○○□(□)-○(○)	G19,H16	Toolholder (Grooving / Cut-Off)
	KGD% ○○○○□□-○D○○	G19,H16	Toolholder (Grooving / Cut-Off)
	KGD% ○○○○□-○(○)TOO	G21,H17	Toolholder (Grooving / Cut-Off)
	KGM% ○-○-○	H20	Toolholder (Grooving / Cut-Off)
J THREADING	KGM% ○○-○	G30,H20	Toolholder (Grooving / Plunge & Turn)
	KGM% ○○-○T	G31	Toolholder (Grooving / Plunge & Turn)
	KGM% ○○○○□-○	G30,H20	Toolholder (Grooving / Plunge & Turn)
	KGM% ○○○○□-○TOO	G31,H21	Toolholder (Grooving / Plunge & Turn)
	KGM% ○○○○□-○(○)-○○	G30,H20	Toolholder (Grooving / Plunge & Turn)
	KGM% ○○○○□□-○(○)	G30,H20	Toolholder (Grooving / Plunge & Turn)
L SOLID END MILLS	L		
	LC-42N	E40,P3	Spare Parts (Shim)
	LCP025097	F20	Spare Parts (Adjustment Pin)
	LCP025140	F22,P3	Spare Parts (Adjustment Pin)
	LGBA-16% S	G12,G13,P4	Spare Parts (Clamp Set)
	LGBA-22% S	G12,G13,P4	Spare Parts (Clamp Set)
M MILLING	LL-1N	E41,P3	Spare Parts (Lock Pin)
	LL-2N	E40,P3	Spare Parts (Lock Pin)
	LOMU ○○○○○○ER-GH	M10	Insert (Milling)
	LOMU ○○○○○○ER-GM	M10	Insert (Milling)
	LOMU ○○○○○○ER-SM	M10	Insert (Milling)
	LPA-11	E17-E19,E30,P3	Spare Parts (Anchor Pin)
P SPARE PARTS	LPA-13	E17-E19,P3	Spare Parts (Anchor Pin)
	LPA-17	E17-E19,P3	Spare Parts (Anchor Pin)
	LPF-11	E22,P3	Spare Parts (Anchor Pin)
	LPF-13	E22,P3	Spare Parts (Anchor Pin)
	LPF-17	E22,P3	Spare Parts (Anchor Pin)
	LPF-1113	E30,P3	Spare Parts (Anchor Pin)
R TECHNICAL	LPF-1117	E30,P3	Spare Parts (Anchor Pin)
	LS-1N	E41,P2	Spare Parts (Lock Screw)
	LS-2N	E40,P2	Spare Parts (Lock Screw)
	LSP-1	E41,P3	Spare Parts (Shim Pin)
	LSP-2	E40,P3	Spare Parts (Shim Pin)
	LT-32N	E41,P3	Spare Parts (Shim)
T INDEX	LT-32N-20	E41,P3	Spare Parts (Shim)
	LTK-5	H24,H25,P5	Spare Parts (Wrench)
	LTW-8SS	E39,P5	Spare Parts (Torx Wrench / L-sharp type)

Part Number	Page	Description
KKC% ○(○)-○□(□)	G24,J27	Toolholder (Grooving / Threading)
KKC% ○○○○□-○-○○○F	G24,J27	Toolholder (Grooving / Threading)
KSTB	E42,E43	Toolholder (Sup-Spindle)
KTGF% ○(○)-○○JXF	G4	Toolholder (Grooving)
KTGF% ○○○○□-○○	G4	Toolholder (Grooving)
KTGF% ○○○○□(□)-○○F	G4	Toolholder (Grooving)
KTKF% ○(○)(○)-○○JX	E12,H8,J6	Toolholder (Back Turning / Cut-Off / Threading)
KTKF% ○○○○□(□)-○○	E12,H8,J6	Toolholder (Back Turning / Cut-Off / Threading)
KTKFS% ○-○○JX	H10	Toolholder (Cut-Off)
KTKFS% ○○○○□-○○□	H10	Toolholder (Cut-Off)
KTKH% ○-○(○)-OS	H24,H25	Toolholder (Cut-Off)
KTKH% ○○○○□-OS	H25	Toolholder (Cut-Off)
KTKH% ○○○○□-○-○○○S	H24	Toolholder (Cut-Off)
KTKH% ○○○○□-○TOOS	H25	Toolholder (Cut-Off)
KTN% ○○○○□-○○	J28	Toolholder (Threading)
KTNS% ○○○○□-○○	J28	Toolholder (Threading)
KTTXR ○(○)-○JXF	J8	Toolholder (Threading)
KTTXR ○○○○□(□)-○○F	J8	Toolholder (Threading)
L		
LC-42N	E40,P3	Spare Parts (Shim)
LCP025097	F20	Spare Parts (Adjustment Pin)
LCP025140	F22,P3	Spare Parts (Adjustment Pin)
LGBA-16% S	G12,G13,P4	Spare Parts (Clamp Set)
LGBA-22% S	G12,G13,P4	Spare Parts (Clamp Set)
LL-1N	E41,P3	Spare Parts (Lock Pin)
LL-2N	E40,P3	Spare Parts (Lock Pin)
LOMU ○○○○○○ER-GH	M10	Insert (Milling)
LOMU ○○○○○○ER-GM	M10	Insert (Milling)
LOMU ○○○○○○ER-SM	M10	Insert (Milling)
LPA-11	E17-E19,E30,P3	Spare Parts (Anchor Pin)
LPA-13	E17-E19,P3	Spare Parts (Anchor Pin)
LPA-17	E17-E19,P3	Spare Parts (Anchor Pin)
LPF-11	E22,P3	Spare Parts (Anchor Pin)
LPF-13	E22,P3	Spare Parts (Anchor Pin)
LPF-17	E22,P3	Spare Parts (Anchor Pin)
LPF-1113	E30,P3	Spare Parts (Anchor Pin)
LPF-1117	E30,P3	Spare Parts (Anchor Pin)
LS-1N	E41,P2	Spare Parts (Lock Screw)
LS-2N	E40,P2	Spare Parts (Lock Screw)
LSP-1	E41,P3	Spare Parts (Shim Pin)
LSP-2	E40,P3	Spare Parts (Shim Pin)
LT-32N	E41,P3	Spare Parts (Shim)
LT-32N-20	E41,P3	Spare Parts (Shim)
LTK-5	H24,H25,P5	Spare Parts (Wrench)
LTW-8SS	E39,P5	Spare Parts (Torx Wrench / L-sharp type)