

Part Numbers in Alphanumeric Order

○ : NUMBER □ : LETTER

Part Number	Page	Description
LTW-10S	<a href="#">E12, E35-E37, G48, G49, H8, H10, J6, P5</a>	Spare Parts (Torx Wrench / L-sharp type)
LTW-10SS	<a href="#">E38, P5</a>	Spare Parts (Torx Wrench / L-sharp type)
LTW-15S	<a href="#">F32, G19, G30, H16, H20, P5</a>	Spare Parts (Torx Wrench / L-sharp type)
LTW-20	<a href="#">E23, G19, G30, G31, H16, H20, H21, P5</a>	Spare Parts (Torx Wrench / L-sharp type)
LTW-25	<a href="#">H17, P5</a>	Spare Parts (Torx Wrench / L-sharp type)
LW-1.5	<a href="#">F20, F22, F25, F34, P5</a>	Spare Parts (Hexagon Wrench / L-sharp type)
LW-2	<a href="#">F20, F22, F25, P5</a>	Spare Parts (Hexagon Wrench / L-sharp type)
LW-3	<a href="#">E40, F62, G42, P5</a>	Spare Parts (Hexagon Wrench / L-sharp type)
LW-4	<a href="#">E30, E31, G20, E21, G30, G31, H17, H20, H21, P5</a>	Spare Parts (Hexagon Wrench / L-sharp type)
<b>M</b>		
MEC ○○(○)○-○○(○)-○○	<a href="#">M3</a>	End Mill (MEC)
MEC ○○(○)○-○○(○)-○○T	<a href="#">M3</a>	End Mill (MEC)
MECX ○○(○)○-○○(○)-○○-OT	<a href="#">M6</a>	End Mill (MECX)
MEW ○○-○○-○○-OT	<a href="#">M9</a>	End Mill (MEW)
MEW ○○○○-W○○○-○○-OT	<a href="#">M9</a>	End Mill (MEW)
MP-1	<a href="#">M9, P5</a>	Anti-seize Compound
<b>P</b>		
PC-1	<a href="#">E41, P5</a>	Spare Parts (Punch)
PC-2	<a href="#">E40, P5</a>	Spare Parts (Punch)
PCLNR ○○○○□□-○○FF	<a href="#">E40</a>	Toolholder (Double Sided Tooling)
PSB% ○○○○-○○NBS	<a href="#">F29</a>	Tip-Bar (Boring)
PSB% ○○○○-○○S	<a href="#">F29</a>	Tip-Bar (Boring)
PSBT% ○○○○-○○S	<a href="#">F29</a>	Tip-Bar (Boring)
PTLNR ○○○○□□-○○FF	<a href="#">E40</a>	Toolholder (Double Sided Tooling)
<b>S</b>		
○○○□- CTUP%○	<a href="#">F55</a>	Boring Bars
○○○(○)□- KTGL16	<a href="#">G5</a>	Sleeve Holder (Grooving)
○○○(○)□- KTTXL16	<a href="#">J8</a>	Sleeve Holder (Threading)
○○○(○)□- SCLGLOO	<a href="#">E34</a>	Sleeve Holder (Turning)
○○○○□- SCLCROO-○○○EZ	<a href="#">F18</a>	Toolholder (EZ Bar-Plus)
○○○□- SCLC%○	<a href="#">F43</a>	Boring Bars
○○○□- SCLC%○○-○○A	<a href="#">F39</a>	Boring Bars (Dynamic Bar)
○○○□- SCLC%○○-○○A	<a href="#">F39</a>	Boring Bars (Dynamic Bar)
○○○□- SCLP%○	<a href="#">F43</a>	Boring Bars
○○○□- SCLP%○○-○○A	<a href="#">F41</a>	Boring Bars (Dynamic Bar)
○○○(○)□- SDLGLOO	<a href="#">E35</a>	Sleeve Holder (Turning)
○○○□- SDQC%○○-○○A	<a href="#">F46</a>	Boring Bars (Dynamic Bar)
○○○(○)□- SDUGLOO	<a href="#">E35</a>	Sleeve Holder (Turning)
○○○□- SDUC%○	<a href="#">F48</a>	Boring Bars
○○○□- SDUC%○○-○○A	<a href="#">F45</a>	Boring Bars (Dynamic Bar)
○○○□- SDZC%○	<a href="#">F49</a>	Boring Bars
○○○□- SDZC%○○-○○A	<a href="#">F47</a>	Boring Bars (Dynamic Bar)
○○○□- STLB%○.○A	<a href="#">F53</a>	Boring Bars (Dynamic Bar)

Part Number	Page	Description
○○○□- STLB%○○-○○A	<a href="#">F53</a>	Boring Bars (Dynamic Bar)
○○○□- STLB%○○-○○A	<a href="#">F53</a>	Boring Bars (Dynamic Bar)
○○○□- STLC%○○-○○A	<a href="#">F51</a>	Boring Bars (Dynamic Bar)
○○○□- STLP%○○-○○A	<a href="#">F53</a>	Boring Bars (Dynamic Bar)
○○○□- STUB%○	<a href="#">F54</a>	Boring Bars
○○○□- STUP%○	<a href="#">F54</a>	Boring Bars
○○○(○)□- STW% 15	<a href="#">F36, G48</a>	Toolholder (for Twin Bars)
○○○□- STWP%○	<a href="#">F54</a>	Boring Bars
○○○□- SVJB%○	<a href="#">F63</a>	Boring Bars
○○○□- SVJC%○○-○○A	<a href="#">F58</a>	Boring Bars (Dynamic Bar)
○○○□- SVJP%○○-○○A	<a href="#">F58</a>	Boring Bars (Dynamic Bar)
○○○□- SVNR12N	<a href="#">F33</a>	Toolholder (for System Tip-Bars)
○○○(○)□- SVNR12SN	<a href="#">F33</a>	Toolholder (for System Tip-Bars)
○○○(○)□- SVNR12SXN	<a href="#">F35</a>	Toolholder (for System Tip-Bars)
○○○□- SVNR12XN	<a href="#">F35</a>	Toolholder (for System Tip-Bars)
○○○□- SVPB%○○-○○A	<a href="#">F61</a>	Boring Bars (Dynamic Bar)
○○○□- SVPC%○○-○○A	<a href="#">F61</a>	Boring Bars (Dynamic Bar)
○○○(○)□- SVUBLOO	<a href="#">E36</a>	Sleeve Holder (Turning)
○○○□- SVUB%○○-○○A	<a href="#">F63</a>	Boring Bars (Dynamic Bar)
○○○□- SVUCLOO	<a href="#">E36</a>	Sleeve Holder (Turning)
○○○□- SVUC%○○-○○A	<a href="#">F63</a>	Boring Bars (Dynamic Bar)
○○○□- SVZB%○○-○○A	<a href="#">F63</a>	Boring Bars (Dynamic Bar)
○○○□- SVZC%○○-○○A	<a href="#">F63</a>	Boring Bars (Dynamic Bar)
○○○□- SWUB%○	<a href="#">F63</a>	Boring Bars
○○○□- SWUB%○.○A	<a href="#">F65</a>	Boring Bars (Dynamic Bar)
○○○□- SWUB%○○-○○A	<a href="#">F65</a>	Boring Bars (Dynamic Bar)
○○○□- SWUB%○○-○○A	<a href="#">F65</a>	Boring Bars (Dynamic Bar)
○○○□- SWUB%○○-○○A	<a href="#">F65</a>	Boring Bars (Dynamic Bar)
○○○□- SWUP%○○-○○A	<a href="#">F65</a>	Boring Bars (Dynamic Bar)
SABSR ○(○)-○○JXF	<a href="#">E17</a>	Toolholder (Turning)
SABSR ○○○○□(□)-○○F	<a href="#">E17</a>	Toolholder (Turning)
SABWR ○(○)-○○JXF	<a href="#">E18, E19</a>	Toolholder (Turning)
SABWR ○○○○□(□)-○○F	<a href="#">E18, E19</a>	Toolholder (Turning)
SB-1STR	<a href="#">F56, P2</a>	Spare Parts (Screw)
SB-1TR	<a href="#">F53, F56, P2</a>	Spare Parts (Screw)
SB-2TR	<a href="#">F56, J29, P2</a>	Spare Parts (Screw)
SB-3.5TR	<a href="#">J28, J29, P2</a>	Spare Parts (Screw)
SB-5TR	<a href="#">G30, G31, G20, H21, P2</a>	Spare Parts (Screw)
SB-1635TR	<a href="#">F18, F39, F50, P2</a>	Spare Parts (Screw)
SB-2035TR	<a href="#">F18, F39, P2</a>	Spare Parts (Screw)
SB-2035TRG	<a href="#">F53, F63, M6, P2</a>	Spare Parts (Screw)
SB-2040TR	<a href="#">J29, P2</a>	Spare Parts (Screw)
SB-2042TRG	<a href="#">M6, P2</a>	Spare Parts (Screw)
SB-2045TRN	<a href="#">G40, G41, P2</a>	Spare Parts (Screw)
SB-2050TR	<a href="#">E29, E32, E33, E36, F58, F61, F63, F65, P2</a>	Spare Parts (Screw)
SB-2250TR	<a href="#">F51, P2</a>	Spare Parts (Screw)
SB-2255TR	<a href="#">G40-G42, P2</a>	Spare Parts (Screw)

GRADES	<b>A</b>
INSERTS	<b>B</b>
CBN & POD	<b>C</b>
TURNING	<b>E</b>
BORING	<b>F</b>
GROOVING	<b>G</b>
CUT-OFF	<b>H</b>
THREADING	<b>J</b>
SOLID END MILLS	<b>L</b>
MILLING	<b>M</b>
SPARE PARTS	<b>P</b>
TECHNICAL	<b>R</b>
INDEX	<b>T</b>