

Part Numbers in Alphanumeric Order

○ : NUMBER □ : LETTER

	Part Number	Page	Description
A	SB-2545TR	F39,F41,F47,F53,F63,M3,P2	Spare Parts (Screw)
	SB-2555TRG	M3,P2	Spare Parts (Screw)
B	SB-2560TR	E34,E35,E42,F45-F47,F49,P2	Spare Parts (Screw)
	SB-2570TR	E21,E23,E25-E34,E39,E42,F57,F63,G40-G42,P2	Spare Parts (Screw)
C	SB-3060TR	F41,F51,P2	Spare Parts (Screw)
	SB-3065TRP	M9,P2	Spare Parts (Screw)
E	SB-3080TR	E17-E19,E29,E38,F32,F33,F35-F37,G48,G49,P2	Spare Parts (Screw)
	SB-4050TRN	H10,P2	Spare Parts (Screw)
F	SB-4065TR	E34,F39,F41,F45,F47,F65,P2	Spare Parts (Screw)
	SB-4070TRS	E43,G4,P2	Spare Parts (Screw)
G	SB-4070TRW	G4,G5,J8,P2	Spare Parts (Screw)
	SB-4085TR	E20,E23,E25-E28,E35,E42,P2	Spare Parts (Screw)
H	SB-4590TRWN	E12,H8,J6,P2	Spare Parts (Screw)
	SB-5090TR	E23,P2	Spare Parts (Screw)
I	SB-40120TR	G19,H16,P2	Spare Parts (Screw)
	SB-40125TRN	E30,P2	Spare Parts (Screw)
J	SCLC% ○(○)-○JXF	E23	Toolholder (Turning)
	SCLC% ○○○○□-○○	E23	Toolholder (Turning)
K	SCLC% ○○○○□(□)-○○FF	E23	Toolholder (Turning)
	SCLNR ○(○)-○(○)□F	E38	Toolholder (for Small Double-Sided Tools)
L	SCLNR ○○○○□-○○FF	E38	Toolholder (for Small Double-Sided Tools)
	SDJC% ○(○)-○JXFF	E25	Toolholder (Turning)
M	SDJC% ○○○○□-○○	E25	Toolholder (Turning)
	SDJC% ○○○○□(□)-○○FF	E25	Toolholder (Turning)
N	SDJCR ○○(○)-○○□-FO	E20	Toolholder (Goose-neck holder)
	SDJCR ○○○○□□-○○-FOO	E20	Toolholder (Goose-neck holder)
O	SDLC% ○(○)-○JXFF	E26	Toolholder (Turning)
	SDLC% ○○○○□(□)-○○FF	E26	Toolholder (Turning)
P	SDLNR ○(○)-○.○□F	E38	Toolholder (for Small Double-Sided Tools)
	SDLNR ○○○○□-○○FF	E38	Toolholder (for Small Double-Sided Tools)
Q	SDLP% ○(○)-○JXFF	E28	Toolholder (Turning)
	SDLP% ○○○○□(□)-○○FF	E28	Toolholder (Turning)
R	SDNCN ○(○)-○JX	E27	Toolholder (Turning)
	SDNCN ○○○○□(□)-○○	E27	Toolholder (Turning)
S	SDNC% ○-○JXF	E27	Toolholder (Turning)
	SDNC% ○○○○□□-○○F	E27	Toolholder (Turning)
T	SDXC% ○○○○□□-○○	E26	Toolholder (Turning)
	SE-40120TR	E30,H20,P2	Spare Parts (Screw)
U	SE-50125TR	G19,G30,H16,H20,P2	Spare Parts (Screw)
	SHA ○○○○(○)-○○○	F62,G42	Sleeve (for Automatic Lathe SIGE)
V	SIGE% ○○EH	G40	Toolholder (Grooving)
	SIGE% ○○(○)(○)(□)-EH	G40	Toolholder (Grooving)

Part Number	Page	Description
SIGE% ○○○○□-WH	G41	Toolholder (Grooving)
SIGER ○○○○□-WH-90	G42	Toolholder (Grooving / for Automatic Lathe)
SIN% ○○○○S-○○	J29	Toolholder (Threading)
SIN% ○○○○S-○○E	J29	Toolholder (Threading)
SKC-2	G24,J27	Spare Parts (Clamp Bolt)
SP3X4	F32,F33,F35,P2	Spare Parts (Screw)
SP3X8	J28,P2	Spare Parts (Screw)
SS-4N	E30,E31,P3	Spare Parts (Shim Screw)
STGC% ○○○○□-○○	E29	Toolholder (Turning)
STGP% ○○○○□-○○	E29	Toolholder (Turning)
STLNR ○(○)-○.○□F	E39	Toolholder (for Small Double-Sided Tools)
STLNR ○○○○□-○○FF	E39	Toolholder (for Small Double-Sided Tools)
STW% ○○○○□-15	F36,G48	Toolholder (for Twin Bars)
STWSR ○○○○□(□)-15T	F37,G49	Toolholder (for Twin Bars)
STXB% ○○○○□B-○○W	F56	Toolholder (Boring / Previous Part Number)
STXP% ○○○○□B-○○W	F56	Toolholder (Boring / Previous Part Number)
STZB% ○○○○□B-○○W	F56	Toolholder (Boring / Previous Part Number)
SVJB% ○(○)-○JXFF	E30	Toolholder (Turning)
SVJB% ○○○○□-○○	E30	Toolholder (Turning)
SVJB% ○○○○□-○○N	E30	Toolholder (Turning)
SVJB% ○○○○□□-○○FF	E30	Toolholder (Turning)
SVJP% ○(○)-○JXFF	E32	Toolholder (Turning)
SVJP% ○○○○□(□)-○○FF	E32	Toolholder (Turning)
SVLP% ○(○)-○(○)JXFF	E32	Toolholder (Turning)
SVLP% ○○○○□(□)-○○FF	E32	Toolholder (Turning)
SVLPR ○○(○)-○□□-FO	E21	Toolholder (Goose-neck holder)
SVLPR ○○○○□□-○○-FOO	E21	Toolholder (Goose-neck holder)
SVN-32N	E30,E31,P3	Spare Parts (Shim)
SVNR ○○○○□-12N	F32	Toolholder (for System Tip-Bars)
SVNSR ○○○○□-12-○○N	F32	Toolholder (for System Tip-Bars)
SVNSR ○○○○□-12-○○XN	F35	Toolholder (for System Tip-Bars)
SVPB% ○○○○□(□)-○○	E31	Toolholder (Turning)
SVPB% ○○○○□-○○N	E31	Toolholder (Turning)
SVPPR ○(○)-○(○)JXFF	E33	Toolholder (Turning)
SVPPR ○○○○□(□)-○○FF	E33	Toolholder (Turning)
SVBN ○○○○□(□)-○○	E31	Toolholder (Turning)
SVBN ○(○)-○JX	E31	Toolholder (Turning)
SVBN ○○○○□-○○N	E31	Toolholder (Turning)
T		
TBET ○○○○(○)(○)M%	B23	Insert (Turning)
TBGT ○○○○(○)%	B23	Insert (Turning)
TBGT ○○○○OCF	B23	Insert (Turning)
TBGT ○○○○(○)M%	B23	Insert (Turning)
TBGT ○○○○OM-CF	B23	Insert (Turning)
TBGT ○○○○OMP-CF	B23	Insert (Turning)
TBGW ○○○○(○)	B23,C14	Insert (Turning)