

Part Numbers in Alphanumeric Order

○ : NUMBER □ : LETTER

Part Number	Page	Description
DD-44	P8	Spare Parts (Shim)
DMC ○○○	E65	End Mill
DMC ○○○H	E67	End Mill
DMC ○○○SX	E66	End Mill
DMC ○○○SXT	E66	End Mill
DMC ○○○SX-○○○	E66	End Mill
DMC ○○○-S○○	E65	End Mill
DN10	P19	Spare Parts (Nozzle)
DN20	P19	Spare Parts (Nozzle)
DR ○○-○○	H5	Spare Parts (Drive-Ring)
DR ○○-○○□	H5	Spare Parts (Drive-Ring)
DR ○○○○-○○○○	H4	Spare Parts (Drive-Ring)
DR ○○○○-○○○○□	H4	Spare Parts (Drive-Ring)
DS-42	P8	Spare Parts (Shim)
DS-44	P8	Spare Parts (Shim)
DT-7	K8, P17	Spare Parts (Torx Wrench / Screwdriver Type)
DT-8	E74, G2, G6, J2, K10, P17	Spare Parts (Torx Wrench / Screwdriver Type)
DT-10	C23, E51, G2, G6, J2, J22-J23, K6, K8, K10, P17	Spare Parts (Torx Wrench / Screwdriver Type)
DT-15	D5, E56, E59, E61, E74, G2, G6, J2, J22-J23, K10, P17	Spare Parts (Torx Wrench / Screwdriver Type)
DT-20	E51, E68, J2, J22-J23, P17	Spare Parts (Torx Wrench / Screwdriver Type)
DT-25	J23, P17	Spare Parts (Torx Wrench / Screwdriver Type)
DT-32	P8	Spare Parts (Shim)
DT-42	P8	Spare Parts (Shim)
DTM-6	E24-E25, G2, G6, P17	Spare Parts (Torx Wrench / Screwdriver Type)
DTM-7	P17	Spare Parts (Torx Wrench / Screwdriver Type)
DTM-8	E12-E13, E15-E17, E30, E32-E33, E35, P17	Spare Parts (Torx Wrench / Screwdriver Type)
DTM-10	P17	Spare Parts (Torx Wrench / Screwdriver Type)
DTM-15	C2, C4, E12, E14-E17, E30, E32-E33, E35, E44, P17	Spare Parts (Torx Wrench / Screwdriver Type)
DTP-9	H20-H21, P17	Spare Parts (Torx Plus Wrench / Screwdriver Type)
DTP-15	C14, H20-H21, P17	Spare Parts (Torx Plus Wrench / Screwdriver Type)
DTP-20	E50, P17	Spare Parts (Torx Plus Wrench / Screwdriver Type)
DTPM-8	E6-E8, E29-E30, F14-F17, J17, P17	Spare Parts (Torx Wrench / Screwdriver Type)
DTPM-10	J13-J14, J17, P17	Spare Parts (Torx Plus Wrench / Screwdriver Type)
DTPM-15	E6-E8, E29-E30, F4, F6-F8, F10, J6-J9, J13-J14, J17, P17	Spare Parts (Torx Wrench / Screwdriver Type)
DV-33	P8	Spare Parts (Shim)
DW-42	P8	Spare Parts (Shim)
DW-44	P8	Spare Parts (Shim)
E		
EM ○○○○	E70	End Mill (Extended Length)
EM ○○○○-○○	E70	End Mill (Extended Length)
EM ○○○○-○○-3F	E70	End Mill (Extended Length)
EM ○○○○-○○○S	E70	End Mill (Extended Length)
EM ○○○○-○.○	E70	End Mill (Extended Length)
EM ○○○○-AL	E73	End Mill (Extended Length)
EM ○○○○-○.○○(○)-AL	E73	End Mill (Extended Length)
EM ○○○○-3F	E70	End Mill (Extended Length)
EM ○○○○-○○○○-LE	E71	End Mill (Extended Length)
F		

Part Number	Page	Description
FH-2	P17	Spare Parts (Hexagon Wrench / Flag Type)
FH-2.5	P17	Spare Parts (Hexagon Wrench / Flag Type)
FM ○○○○-90RH	E72	Face Mill (Fixed Pocket)
FM ○○○○-90AL-(125)	E73	Face Mill (Fixed Pocket)
FM AL-○○○○-90-○	E73	Face Mill (Fixed Pocket)
FPMT ○○○○○○ER	-	Insert (Milling)
FT-6	P17	Spare Parts (Torx Wrench / Flag Type)
FT-7	P17	Spare Parts (Torx Wrench / Flag Type)
FT-8	E65, E75, P17	Spare Parts (Torx Wrench / Flag Type)
FT-10	E65, E75, P17	Spare Parts (Torx Wrench / Flag Type)
FT-15	E49, E66-E67, E69, E75, K12, P17	Spare Parts (Torx Wrench / Flag Type)
FTP-5	P17	Spare Parts (Torx Wrench / Flag Type)
FTP-6	F22, P17	Spare Parts (Torx Wrench / Flag Type)
FTP-7	P17	Spare Parts (Torx Wrench / Flag Type)
G		
GOMT ○○□○○○(○)ER-D	B19	Insert (Milling)
GP-1	P19	Spare Parts (Plug)
GP-2	P19	Spare Parts (Plug)
GS-50	P2	Spare Parts (Screw)
GS-50S	P2	Spare Parts (Screw)
GS-4090T%W	P2	Spare Parts (Screw)
GVR ○○○□(□)	K13	Insert (Grooving / Previous Description)
GVR ○○○-○○○□(□)	K13	Insert (Grooving)
GVFR ○○○□	K14	Insert (Grooving / Previous Description)
GVFR ○○○-○○○□	K14	Insert (Grooving)
H		
HF16X40HA	P2	Spare Parts (Screw with Coolant Hole)
HF20X53H	P2	Spare Parts (Screw with Coolant Hole)
HF20X53HA	P2	Spare Parts (Screw with Coolant Hole)
HF24X60H	E16, P2	Spare Parts (Screw with Coolant Hole)
HF24X60HA	P2	Spare Parts (Screw with Coolant Hole)
HH3/8-1.25H	E6, E16, E25, E44, F4, J6, P2	Spare Parts (Arbor / Mounting Bolt)
HH1/2-1.25H	E16, E44, F4, J6, P2	Spare Parts (Arbor / Mounting Bolt)
HH3/4-2.3H	E16, P2	Spare Parts (Arbor / Mounting Bolt)
HH1/4-0.75	F16, J13, P2	Spare Parts (Arbor / Mounting Bolt)
HH3/8-1.25	C2, E6, E30, E33, E44, F4, F16, J6, J13, P2	Spare Parts (Arbor / Mounting Bolt)
HH3/8-1.5	E33, P2	Spare Parts (Arbor / Mounting Bolt)
HH1/2-1.25	C2, C10, D5, E30, E44, E56, F4, J6, J13, P2	Spare Parts (Arbor / Mounting Bolt)
HH3/4-2.3	C10, D5, P2	Spare Parts (Arbor / Mounting Bolt)
HH3X6	P2	Spare Parts (Screw)
HH3X12	P2	Spare Parts (Screw)
HH4X12	P3	Spare Parts (Screw)
HH4X16	C22, P2	Spare Parts (Screw)
HH5X15	P2	Spare Parts (Screw)
HH5X16	P2	Spare Parts (Screw)
HH5X20	P2	Spare Parts (Screw)

GRADES	A
LINEUP / INSERTS	B
45° / 70° LEAD	C
75° LEAD	D
90° LEAD	E
HIGH FEED	F
MULTI-FUNCTION	G
SLOT MILLS	H
RADIUS / BALL-NOSE	J
OTHER APPLICATIONS	K
TOOL HOLDING	O
SPARE PARTS	P
TECHNICAL	R
INDEX	T