

Part Numbers in Alphanumeric Order

○ : NUMBER □ : LETTER

Part Number	Page	Description
PST-IP20	F4, F6, F9, J6-J9, J13-J14, J17, P20	Spare Parts (Pre-Set Torque Wrench)
PST-T6	P20	Spare Parts (Pre-Set Torque Wrench)
PST-T7	P20	Spare Parts (Pre-Set Torque Wrench)
PST-T8	E12-E13, E15-E16, E32-E33, E35, P20	Spare Parts (Pre-Set Torque Wrench)
PST-T9	P20	Spare Parts (Pre-Set Torque Wrench)
PST-T10	P20	Spare Parts (Pre-Set Torque Wrench)
PST-T15	C10, C12, E12, E14-E16, E32-E33, E35, P20	Spare Parts (Pre-Set Torque Wrench)
PST-T20	P20	Spare Parts (Pre-Set Torque Wrench)
R		
R ○○-(R)-(SET)	K3	Cartridge Set (API Ring Groover)
R ○○-SET	K3	Cartridge Set (API Ring Groover)
RDFG ○○FR	B21	Insert (Milling)
RDGT ○○○○M0ER-GM	B16	Insert (Milling)
RDGT ○○○○M0ER-SM	B16	Insert (Milling)
RDHX ○○□○IM0T	B21	Insert (Milling)
RDMT ○○□○M0-H	B21	Insert (Milling)
RDMT ○○○○M0EN-GH	B16	Insert (Milling)
RDMT ○○○○M0ER-GM	B16	Insert (Milling)
ROMU ○○○○M0ER-GH	B16	Insert (Milling)
ROMU ○○○○M0ER-GM	B16	Insert (Milling)
ROMU ○○○○M0ER-SM	B16	Insert (Milling)
RPGT ○○□○M0ER-GM	B16	Insert (Milling)
RPGT ○○□○M0ER-SM	B16	Insert (Milling)
RPMT ○○□○IM0	B21	Insert (Milling)
RPMT ○○□○M0EN-GH	B16	Insert (Milling)
RPMT ○○□○M0ER-GM	B16	Insert (Milling)
RPMT ○○○○M0-H	B21	Insert (Milling)
RPMW ○○○○M0TN	B16	Insert (Milling)
ROMU ○○○○M0ER-GH	B16	Insert (Milling)
ROMU ○○○○M0ER-GM	B16	Insert (Milling)
ROMU ○○○○M0ER-SM	B16	Insert (Milling)
S		
SB-1STR	P5	Spare Parts (Screw)
SB-1TR	P5	Spare Parts (Screw)
SB-2TR	P5	Spare Parts (Screw)
SB-3STR	P5	Spare Parts (Screw)
SB-3TR	P5	Spare Parts (Screw)
SB-3.5TR	P5	Spare Parts (Screw)
SB-4STR	E75	Spare Parts (Screw)
SB-4TR	P5	Spare Parts (Screw)
SB-5TR	P5	Spare Parts (Screw)
SB-1635TR	P5	Spare Parts (Screw)
SB-1840TRP	F22, P5	Spare Parts (Screw)
SB-2035TR	P5	Spare Parts (Screw)
SB-2035TRG	E24, P5	Spare Parts (Screw)
SB-2040TR	P5	Spare Parts (Screw)
SB-2040TRG	G2, G6, P5	Spare Parts (Screw)
SB-2042TRG	E24-E25, P5	Spare Parts (Screw)
SB-2045TR	P5	Spare Parts (Screw)
SB-2045TRN	P5	Spare Parts (Screw)
SB-2050TR	P5	Spare Parts (Screw)
SB-2060TR	P5	Spare Parts (Screw)
SB-2080TR	P5	Spare Parts (Screw)
SB-2250TR	K8, P5	Spare Parts (Screw)
SB-2255TR	P5	Spare Parts (Screw)
SB-2260TR	K8, P5	Spare Parts (Screw)

Part Number	Page	Description
SB-2290TR	P5	Spare Parts (Screw)
SB-2545TR	E12-E13, E65, E75, P5	Spare Parts (Screw)
SB-2555TRG	E12-E13, E15-E17, E32, E33, E35, G2, G6, P5	Spare Parts (Screw)
SB-2555TRP	J17, P5	Spare Parts (Screw)
SB-2560TR	E74, K10, P5	Spare Parts (Screw)
SB-2570TR	P5	Spare Parts (Screw)
SB-3060TR	C23, E65, E75, J22, K6, K10, P5	Spare Parts (Screw)
SB-3060TRG	P5	Spare Parts (Screw)
SB-3065TRP	E6-E8, E29-E30, F14-F17, P5	Spare Parts (Screw)
SB-3070TRG	G2, G6, P5	Spare Parts (Screw)
SB-3070TRP	J13-J14, J17, P5	Spare Parts (Screw)
SB-3080TR	E51, J22-J23, K8, P5	Spare Parts (Screw)
SB-3580TR	P5	Spare Parts (Screw)
SB-3590TRP	H20-H21, P5	Spare Parts (Screw)
SB-3592TR	P5	Spare Parts (Screw)
SB-4050TRN	P5	Spare Parts (Screw)
SB-4060TR	E66-E67, P5	Spare Parts (Screw)
SB-4065TR	E66, E67, K12, P5	Spare Parts (Screw)
SB-4070TRG	G2, G6, P5	Spare Parts (Screw)
SB-4070TRN	E12, E14-E17, E32-E33, E35, P5	Spare Parts (Screw)
SB-4070TRS	P5	Spare Parts (Screw)
SB-4070TRW	P6	Spare Parts (Screw)
SB-4075TRP	F7-F8, F10, P5	Spare Parts (Screw)
SB-4082TPR	C14, P5	Spare Parts (Screw)
SB-4085TR	E74, J22-J23, K10, K12, P5	Spare Parts (Screw)
SB-4085TRP	J6-J9, K10, P5	Spare Parts (Screw)
SB-4090TRP	E6, E7-E8, E29-E30, J13-J14, P5	Spare Parts (Screw)
SB-4090TRPN	F4, F6, J17, P5	Spare Parts (Screw)
SB-4590TRWN	P6	Spare Parts (Screw)
SB-5070TR	K6, P5	Spare Parts (Screw)
SB-5085TR	E51, E68, P5	Spare Parts (Screw)
SB-5090TR	K6, P5	Spare Parts (Screw)
SB-25100TR	P5	Spare Parts (Screw)
SB-40115TR	J22-J23, P5	Spare Parts (Screw)
SB-40120TR	P5	Spare Parts (Screw)
SB-40125TRN	P5	Spare Parts (Screw)
SB-40140TR	D5, E56, E59, E61, P5	Spare Parts (Screw)
SB-40140TRN	C2, C4, E44, P5	Spare Parts (Screw)
SB-45130TR	E50, P5	Spare Parts (Screw)
SB-50120TR	J22-J23, P5	Spare Parts (Screw)
SB-50120TRP	F4, F6, F9, J13-J14, J17, P5	Spare Parts (Screw)
SB-50120TRS	C14, P5	Spare Parts (Screw)
SB-50137K	P5	Spare Parts (Screw)
SB-50140TR	C2, C4, E44-E45, P5	Spare Parts (Screw)
SB-50140TRP	J6-J9, P5	Spare Parts (Screw)
SB-60120TR	D5, E56, E59, E61, J23, P5	Spare Parts (Screw)
SC-30067	J2, P6	Spare Parts (Screw)
SC-35085	J2, P6	Spare Parts (Screw)
SC-40100	J2, P6	Spare Parts (Screw)
SC-50130	J2, P6	Spare Parts (Screw)
SC-60160	J2, P6	Spare Parts (Screw)
SC-60210	J2, P6	Spare Parts (Screw)
SCR-01	E70, E73, K4, K5 P6	Spare Parts (Screw)
SCR-02	E73, K4, K5	Spare Parts (Screw)
SCR-03	P5	Spare Parts (Screw)
SCR-04	E70, K5, P6	Spare Parts (Screw)