

Part Numbers in Alphanumeric Order

○ : NUMBER □ : LETTER

Part Number	Page	Description
SPKR ○○EDER-S	B11	Insert (Milling)
SPM ○○○	B11	Insert (Milling)
SPMR ○○EDER-H	B11	Insert (Milling)
SPMT ○○○○EDER-NBO	B23	Insert (Milling)
SPMT ○○○○EDER-NBOP	B23	Insert (Milling)
SPMT ○○○○EDER-V	B23	Insert (Milling)
SPMT ○○○○EDS%-NB□	B23	Insert (Milling)
SPMT ○○○○○EN-NBO	B24	Insert (Milling)
SPMT ○○○○○EN-NBOP	B24	Insert (Milling)
SPMT ○○○○○EN-V	B24	Insert (Milling)
SPMT ○○○○○E-Z	B24	Insert (Milling)
SP-RC	P12	Spare Parts (Shim)
SPW-6045	E50, P6	Spare Parts (Screw)
SPW-7050	C2, C4, E44, P6	Spare Parts (Screw)
SS-4N	P6	Spare Parts (Shim Screw)
SV-60136R	E48, P6	Spare Parts (Screw)
SV-60136TR	C19, P6	Spare Parts (Screw)
SVN-32	P12	Spare Parts (Shim)
SVN-32N	P12	Spare Parts (Shim)
T		
T7	E70, E73, K4, K5	Spare Parts (Wrench)
T10	E70-E72, K5	Spare Parts (Wrench)
T15	E73, K4, K5	Spare Parts (Wrench)
TEEN ○OPTFR	B26	Insert (Milling)
TEEN ○OPTFR-NE	B26	Insert (Milling)
TEEN ○OPTTR	B12	Insert (Milling)
TEKN ○OPTFR	B12, B26	Insert (Milling)
TEKN ○OPTFR-NE	B26	Insert (Milling)
TEKN ○OPTTR	B12	Insert (Milling)
TEKR ○OPTER-S	B12	Insert (Milling)
TEMR ○OPTER-H	B12	Insert (Milling)
TEMT ○○○○○-AQ	B24	Insert (Milling)
TH-3L	H20-H21	Spare Parts (Wrench)
TH-4	C16, C22, P18	Spare Parts (Hexagon Wrench / T-Shape Type)
TH8X15	C22, P6	Spare Parts (Screw)
TN-32	P12	Spare Parts (Shim)
TN-43	P12	Spare Parts (Shim)
TNW-32	P12	Spare Parts (Shim)
TPG ○○○(○)(○)(○)	B12, B26	Insert (Milling)
TPK ○OPDFR	B12	Insert (Milling)
TPK ○OPDTR	B12	Insert (Milling)
TPKR ○OPDER-S	B12	Insert (Milling)
TPM ○○○	B12	Insert (Milling)
TPMR ○OPDER-H	B12	Insert (Milling)
TS-3S	P7	Spare Parts (Lock Pin)
TT-15	C2, C4, C10, C12, E44-E45, P18	Spare Parts (Torx Wrench / T-Shape Type)
TT-15L	H9	Spare Parts (Torx Wrench / T-Shape Type)
TT-25	J2, P18	Spare Parts (Torx Wrench / T-Shape Type)
TT-25L	D5, E56, E59, E61, P18	Spare Parts (Torx Wrench / T-Shape Type)
TT-30	J2, P18	Spare Parts (Torx Wrench / T-Shape Type)
TTC-20	C16, C19, P18	Spare Parts (Torx Wrench / T-Shape Type)
TTC-25	C18, E48, P18	Spare Parts (Torx Wrench / T-Shape Type)
TTP-20	F4, F6, F9, J6-J9, J13-J14, J17, P18	Spare Parts (Torx Wrench / T-Shape Type)
V		
VCMT ○○○HQ	B25, K4	API Insert (Ring Grooving)

Part Number	Page	Description
W		
W-6	P18	Spare Parts (Washer)
W-8	P18	Spare Parts (Washer)
W6-14	P18	Spare Parts (Washer)
W6X17	C19, P6	Spare Parts (Screw)
W6X18	H20-H21, P6	Spare Parts (Wedge Lock Screw)
W6X18N	C10, C12, P6	Spare Parts (Wedge Lock Screw)
W6X20	H20-H21, P6	Spare Parts (Wedge Lock Screw)
W8X16	E48, P6	Spare Parts (Screw)
W8X18	E49, P6	Spare Parts (Screw)
W8X21	C16, P6	Spare Parts (Wedge Lock Screw)
WB-5	P18	Spare Parts (Washer)
WB-6	P18	Spare Parts (Washer)
WB-8	P18	Spare Parts (Washer)
WC- ○○	H20-H21	Spare Parts (Wedge)
WCS-1N	P14	Spare Parts (Clamp Set)
WCS-8	P14	Spare Parts (Clamp Set)
WN-1	P19	Spare Parts (Shim Nut)
WNEU ○○○○○EN-GL	B17	Insert (Milling)
WNGT ○○○○○FN-AM	B17	Insert (Milling)
WNMU ○○○○○EN-GH	B17	Insert (Milling)
WNMU ○○○○○EN-GM	B17	Insert (Milling)
WNMU ○○○○○EN-SM	B17	Insert (Milling)
WOF07R	C16	Spare Parts (Wedge)
WP-1S	P7	Spare Parts (Shim Pin)
WP5X11	P7	Spare Parts (Shim Pin)
WP5X15	P7	Spare Parts (Shim Pin)
WSP-1	P18	Spare Parts (Spacer)
WTN-33	P12	Spare Parts (Shim)
WTN-33-20	P12	Spare Parts (Shim)
WWN-42	P12	Spare Parts (Shim)
WWP-42	P12	Spare Parts (Shim)
WWP-42-16	P12	Spare Parts (Shim)
X		
XNS610	C2, E44, F4, P6	Spare Parts (Mounting Screw)
XPMT ○○○○○○	B25	Insert (Milling)
XPMT ○○○○○	B25	Insert (Milling)

T
INDEX