

Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
DCMW ○○○○○○ME-T	C11	Insert (Turning) / Previous Description
DCMW ○○○○○○SE	C11	Insert (Turning) / Previous Description
DCMW ○○○○○○SE-T	C11	Insert (Turning) / Previous Description
DCMW ○○○○○○S○○○○○MET	C11	Insert (Turning)
DCMW ○○○○○○S○○○○○SET	C11	Insert (Turning)
DCMW ○○○○○○T○○○○○	C11	Insert (Turning)
DCMW ○○○○○○T○○○○○ME	C11	Insert (Turning)
DCMW ○○○○○○T○○○○○SE	C11	Insert (Turning)
DD-43	D10	Spare Parts (Shim)
DD-44	D10	Spare Parts (Shim)
DDJN%L ○○○○□-○○○○	D10	Toolholder (Turning)
DDHN%L ○○○○□-○○○○	D10	Toolholder (Turning)
DMC ○○○	M78	Endmill
DMC ○○○H	M79	Endmill
DMC ○○○SX	M78	Endmill
DMC ○○○SXT	M78	Endmill
DMC ○○○SX-○○○	M78	Endmill
DMC ○○○-S○○	M78	Endmill
DNGA ○○○○○○	B82, C6	Insert (Turning)
DNGA ○○○○○○ME	C6	Insert (Turning) / Previous Description
DNGA ○○○○○○ME-T	C6	Insert (Turning) / Previous Description
DNGA ○○○○○○SE	C6	Insert (Turning) / Previous Description
DNGA ○○○○○○SE-T	C6	Insert (Turning) / Previous Description
DNGA ○○○○○○S○○○○○	B82, C6	Insert (Turning)
DNGA ○○○○○○S○○○○○ME	C6	Insert (Turning)
DNGA ○○○○○○S○○○○○MET	C6	Insert (Turning)
DNGA ○○○○○○S○○○○○SE	C6	Insert (Turning)
DNGA ○○○○○○S○○○○○SET	C6	Insert (Turning)
DNGA ○○○○○○T○○○○○	B82, C6	Insert (Turning)
DNGA ○○○○○○T○○○○○ME	C6	Insert (Turning)
DNGA ○○○○○○T○○○○○SE	C6	Insert (Turning)
DNGA ○○○○○○T○○○○○	B82	Insert (Turning)
DNGG ○○○○○○AH	B23	Insert (Turning)
DNGG ○○○○○○DP	B19	Insert (Turning)
DNGG ○○○○○○%L	B23, B41	Insert (Turning)
DNGG ○○○○○○%L-A3	B23	Insert (Turning)
DNGG ○○○○○○%L-S	B23, B41	Insert (Turning)
DNGM ○○○○○○BB○	C6	Insert (Turning)
DNGM ○○○○○○S○○○○○BB○	C6	Insert (Turning)
DNGN ○○○○○○	B82	Insert (Turning)
DNGN ○○○○○○S○○○○○	B82	Insert (Turning)
DNGN ○○○○○○T○○○○○	B82	Insert (Turning)
DNGU ○○○○○○ME%L-U	B39	Insert (Turning)
DNGU ○○○○○○(○)MF%L-F	B39	Insert (Turning)
DNGU ○○○○○○MF%L-U	B39	Insert (Turning)
DNGU ○○○○○○MF-SK	B39	Insert (Turning)
DNGX ○○○○○○T○○○○○	B82	Insert (Turning)
DNMA ○○○○○○	B23, B41	Insert (Turning)
DNMG ○○○○○○	B20, B41	Insert (Turning)
DNMG ○○○○○○AH	B23	Insert (Turning)
DNMG ○○○○○○C	B23	Insert (Turning)
DNMG ○○○○○○CJ	B19	Insert (Turning)
DNMG ○○○○○○CQ	B19, B41	Insert (Turning)
DNMG ○○○○○○CS	B20, B41	Insert (Turning)
DNMG ○○○○○○GC	B23	Insert (Turning)
DNMG ○○○○○○GP	B19, B41	Insert (Turning)
DNMG ○○○○○○GS	B20, B41	Insert (Turning)
DNMG ○○○○○○GT	B20, B41	Insert (Turning)
DNMG ○○○○○○GU	B22	Insert (Turning)
DNMG ○○○○○○HK	B19	Insert (Turning)
DNMG ○○○○○○HQ	B19, B41	Insert (Turning)
DNMG ○○○○○○HS	B20, B41	Insert (Turning)
DNMG ○○○○○○HT	B20, B41	Insert (Turning)
DNMG ○○○○○○HU	B22	Insert (Turning)
DNMG ○○○○○○MQ	B22	Insert (Turning)
DNMG ○○○○○○MS	B22	Insert (Turning)
DNMG ○○○○○○MU	B22	Insert (Turning)
DNMG ○○○○○○PH	B21	Insert (Turning)
DNMG ○○○○○○PS	B20	Insert (Turning)
DNMG ○○○○○○PT	B20	Insert (Turning)
DNMG ○○○○○○%L-ST	B22	Insert (Turning)
DNMG ○○○○○○TK	B22	Insert (Turning)
DNMG ○○○○○○TN-V	B19	Insert (Turning)
DNMG ○○○○○○XP	B21, B41	Insert (Turning)
DNMG ○○○○○○XP-T	B21, B41	Insert (Turning)
DNMG ○○○○○○XQ	B21, B41	Insert (Turning)

Description	Page	Category
DNMG ○○○○○○XS	B21, B41	Insert (Turning)
DNMG ○○○○○○ZS	B23	Insert (Turning)
DNMM ○○○○○○M	C17	Insert (Turning)
DNMM ○○○○○○M-NE	C17	Insert (Turning)
DNMM ○○○○○○M-SE	C17	Insert (Turning)
DNMM ○○○○○○PX	B21	Insert (Turning)
DNMP ○○○○○○TK	B19, B41	Insert (Turning)
DNMU ○○○○○○E-GK	B39	Insert (Turning)
DPET ○○○○○○(○)F%L-USF	B56	Insert (Turning)
DPET ○○○○○○(○)M%L-FSF	B56	Insert (Turning)
DPET ○○○○○○(○)MF%L-USF	B56	Insert (Turning)
DPET ○○○○○○(○)%L-FSF	B56	Insert (Turning)
DR ○○-○○	M96	Spare Parts (Drive-Ring)
DR ○○-○○□	M96	Spare Parts (Drive-Ring)
DR ○○○○-○○○○	M97	Spare Parts (Drive-Ring)
DR ○○○○-○○○○□	M97	Spare Parts (Drive-Ring)
DR12CR-IN	K47	Cartridge (Drill)
DR12CR-OUT	K47	Cartridge (Drill)
DR20CR-IN	K47	Cartridge (Drill)
DR20CR-OUT	K47	Cartridge (Drill)
DS ○○○	K37	Insert (Drilling)
DS-44	D12	Spare Parts (Shim)
DSBN%L ○○○○□-○○	D12	Toolholder (Turning)
DT-7	G36, G37, G38, K38, K40, K42, K44, M136, P17	Spare Parts (Trox Wrench / Screwdriver type)
DT-8	K40, K42, K44, M69, M83, M86, M87, M91, M120, M130, M138, P17	Spare Parts (Trox Wrench / Screwdriver type)
DT-9	K11	Spare Parts (Trox Wrench / Screwdriver type)
DT-10	M34, M43, M69, M74, M86, M87, M91, M120, M123, M124, M130, M134, M136, M138, P17	Spare Parts (Trox Wrench / Screwdriver type)
DT-15	K11, K40, K42, K44, K46, M38, M62, M63, M83, M86, M87, M91, M120, M123, M124, M130, M138, P17	Spare Parts (Trox Wrench / Screwdriver type)
DT-20	K25, K27, K29, K30, K41, K42, K43, K44, K45, K46, K47, M43, M80, M120, M123, M124, P17	Spare Parts (Trox Wrench / Screwdriver type)
DT-25	K25, K27, K29, K30, K41, K43, K47, M124, P17	Spare Parts (Trox Wrench / Screwdriver type)
DT-32	D14	Spare Parts (Shim)
DTGN%L ○○○○□-○○	D14	Toolholder (Turning)
DTM-6	K24, K26, K28, K30, M52, M53, M86, M87, M91, P17	Spare Parts (Trox Wrench / Screwdriver type)
DTM-7	K24, K26, K28, K30	Spare Parts (Trox Wrench / Screwdriver type)
DTM-8	K24, K26, K28, K30, M44, M45, M46, M56, M57, P17	Spare Parts (Trox Wrench / Screwdriver type)
DTM-10	K24, K26, K28, K30	Spare Parts (Trox Wrench / Screwdriver type)
DTM-15	K25, K26, K28, K30, M44, M45, M46, M56, M57, P17	Spare Parts (Trox Wrench / Screwdriver type)
DTP-9	M112, M113	Spare Parts (Trox Wrench / Screwdriver type)
DTP-15	M22, P17	Spare Parts (Trox Wrench / Screwdriver type)
DTP-20	M42, P17	Spare Parts (Trox Wrench / Screwdriver type)
DV-33	D16	Spare Parts (Shim)
DVLN%L ○○○○□-○○	D16	Toolholder (Turning)
DVPN%L ○○○○□-○○	D16	Toolholder (Turning)
DW-44	D20	Spare Parts (Shim)
DWLN%L ○○○○□-○○	D20	Toolholder (Turning)
DVVNN ○○○○□-○○	D16	Toolholder (Turning)