

Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
HH4X12	G63, K47, P2	Spare Parts (Bolt)
HH4X16	M31, M33, M39, M41, P2	Spare Parts (Bolt)
HH5X15	G48, P2	Spare Parts (Bolt)
HH5X16	D23, G23, G24, G25, H13, P2	Spare Parts (Bolt)
HH5X20	F45, G66, G67, P2	Spare Parts (Bolt)
HH5X25	G23, G24, G25, G66, G67, H13, H19, P2	Spare Parts (Bolt)
HH5X30	F45, P2	Spare Parts (Bolt)
HH6X12	K47, P2	Spare Parts (Bolt)
HH6X16	P2	Spare Parts (Bolt)
HH6X20	F45, G17, G47, P2	Spare Parts (Bolt)
HH6X25	G16, G23, G27, G45, G68, H13, P2	Spare Parts (Bolt)
HH6X30	F45, H19, P2	Spare Parts (Bolt)
HH8X25	M22, M57, P2	Spare Parts (Bolt)
HH8X35	M69, P2	Spare Parts (Bolt)
HH8X40	M69, P2	Spare Parts (Bolt)
HH8X50	M69, M130, P2	Spare Parts (Bolt)
HH8X55	M130, P2	Spare Parts (Bolt)
HH8X65	M69, M130, P2	Spare Parts (Bolt)
HH8X70	P2	Spare Parts (Bolt)
HH8X80	P2	Spare Parts (Bolt)
HH8X85	P2	Spare Parts (Bolt)
HH8X25H	M46, P6	Spare Parts (Bolt with Coolant Hole)
HH8X100	P2	Spare Parts (Bolt)
HH8X110	P2	Spare Parts (Bolt)
HH10X25	M124	Spare Parts (Bolt)
HH10X30	M57, M124, P2	Spare Parts (Bolt)
HH10X30H	M46, P6	Spare Parts (Bolt with Coolant Hole)
HH10X30M	M22, P2	Spare Parts (Bolt)
HH10X30S	M22, P2	Spare Parts (Bolt)
HH10X35	M101, P2	Spare Parts (Bolt)
HH10X40	M57, P2	Spare Parts (Bolt)
HH12X25	M124, P2	Spare Parts (Bolt)
HH12X30	P2	Spare Parts (Bolt)
HH12X35	M38, M101, M112, M113	Spare Parts (Bolt)
HH12X35H	M46, P6	Spare Parts (Bolt with Coolant Hole)
HH12X35M	M22, P2	Spare Parts (Bolt)
HH12X40	M57, M69, P2	Spare Parts (Bolt)
HH12X55	M130, P2	Spare Parts (Bolt)
HH12X65	M69, M130, P2	Spare Parts (Bolt)
HH12X80	P2	Spare Parts (Bolt)
HH12X85	P2	Spare Parts (Bolt)
HH12X100	P2	Spare Parts (Bolt)
HH12X110	P2	Spare Parts (Bolt)
HH12X120	P2	Spare Parts (Bolt)
HH12X130	P2	Spare Parts (Bolt)
HH12X140	P2	Spare Parts (Bolt)
HH12X150	P2	Spare Parts (Bolt)
HH16X35	M112, M113	Spare Parts (Bolt)
HH16X40	P3	Spare Parts (Bolt)
HH16X45	M57, P3	Spare Parts (Bolt)
HH16X65	M74, P3	Spare Parts (Bolt)
HH16X90	M74, P3	Spare Parts (Bolt)
HH16X52H	M46, P6	Spare Parts (Bolt with Coolant Hole)
HH16X110	P3	Spare Parts (Bolt)
HH16X130	P3	Spare Parts (Bolt)
HH20X40	M101, P3	Spare Parts (Bolt)
HH20X55	P3	Spare Parts (Bolt)
HH20X75	P3	Spare Parts (Bolt)
HH20X90	M74, P3	Spare Parts (Bolt)
HH20X110	M74, P3	Spare Parts (Bolt)
HH20X120	P3	Spare Parts (Bolt)
HH20X140	P3	Spare Parts (Bolt)

Description	Page	Category
HH20X150	P3	Spare Parts (Bolt)
HH20X170	P3	Spare Parts (Bolt)
HH24X40	M77, P3	Spare Parts (Bolt)
HH24X60	M77, P3	Spare Parts (Bolt)
HH24X75	M77, P3	Spare Parts (Bolt)
HH24X90	M74, M77, P3	Spare Parts (Bolt)
HH24X110	M74, M77, P3	Spare Parts (Bolt)
HH24X120	M77, P3	Spare Parts (Bolt)
HH24X140	M77, P3	Spare Parts (Bolt)
HH24X150	M77, P3	Spare Parts (Bolt)
HH24X170	M77, P3	Spare Parts (Bolt)
HPB% ○○○○-○○○	F18	2 edges Tip-Bar (Boring)
HPB% ○○○○-○○○NB	F18	2 edges Tip-Bar (Boring)
HPBT% ○○○○-○○○	F18	2 edges Tip-Bar (Back Boring)
HPFG% ○○○○-○○	G53	2 edges Tip-Bar (Internal Face Grooving)
HPG% ○○○○-○○	G30	2 edges Tip-Bar (Internal Grooving)
HPTR ○○○○○-○○-○○○	J24	2 edges Tip-Bar (Internal Threading)
HS3X4	F13, F14, F21, F75, P3	Spare Parts (Screw)
HS3X8	F13, F14, P3	Spare Parts (Screw)
HS3X12	F13, F14, P3	Spare Parts (Screw)
HS3X16	F13, P3	Spare Parts (Screw)
HS3X4P	F19, P3	Spare Parts (Screw)
HS4X4	F21, F75, G32, G57, J26, P3	Spare Parts (Screw)
HS4X4P	F19, G31, G53, J25, P3	Spare Parts (Screw)
HS5X5	F75, P3	Spare Parts (Screw)
HS6X4P	G38	Spare Parts (Screw)
HS6X6	F76, P3	Spare Parts (Screw)
HS6X14	F76, P3	Spare Parts (Screw)
HS6X22	F76, P3	Spare Parts (Screw)
HS8X10	N11, P3	Spare Parts (Screw)
HS8X12	N11, P3	Spare Parts (Screw)
HS10X10	F76, P3	Spare Parts (Screw)
HS10X16	N11, P3	Spare Parts (Screw)
HS12X12	N11, P3	Spare Parts (Screw)
HS12X16	N11, P3	Spare Parts (Screw)
HS12X18	N11, P3	Spare Parts (Screw)
HS12X20	N11, P3	Spare Parts (Screw)
HS12X25	N4, P3	Spare Parts (Screw)
HS12X30	N4, N5, P3	Spare Parts (Screw)
HS12X35	N5, P3	Spare Parts (Screw)
HS16X12	N11, P3	Spare Parts (Screw)
HS16X18	N11, P3	Spare Parts (Screw)
HS16X20	N11, P3	Spare Parts (Screw)
HSB4X8% ○○○○○-○○○	E8, E9, E10, E11, E14, E20, E23, E24, P3	Spare Parts (Screw)

J			
JCET	○○○○○○○M%-FSF	B57	Insert (Turning)
JCET	○○○○○○○%-FSF	B57	Insert (Turning)
JCGT	○○○○○○○M%-F	B57	Insert (Turning)
JCGT	○○○○○○○%-F	B57	Insert (Turning)
JOMT	○○○○○○○ER-D	M18	Insert (Milling)

K			
KFMS%	○○○○□○○(○)○○(○)-8	G68	Toolholder (Grooving/Plunge&Turn)
KFMS%	○○○○□○○(○)○○(○)-○	G66, G67	Toolholder (Grooving/Plunge&Turn)
KFTB%	○○○○○○(○)-○S	G69	Blade (Grooving)
KGA%	○○○○□-○	G17	Toolholder (Grooving)
KGA%	○○○○□-○S	G17	Toolholder (Grooving)
KGB%	○○○○□22-○○	G11	Toolholder (Grooving)
KGB%	○○○○□-○○	G11	Toolholder (Grooving)
KGBA%	○○○○□22-○○	G9	Toolholder (Grooving)
KGBA%	○○○○□22-○○T5	G9	Toolholder (Grooving)
KGBA%	○○○○□-○○	G9	Toolholder (Grooving)
KGBAS%	○○○○□22-○○	G9	Toolholder (Grooving)
KGBAS%	○○○○□22-○○T5	G9	Toolholder (Grooving)
KGBAS%	○○○○□-○○	G9	Toolholder (Grooving)

S

?

Index