

Description	Page	Category
KGBS%L ○○○○□22-○○	G11	Toolholder (Grooving)
KGBS%L ○○○○□-○○	G11	Toolholder (Grooving)
KGH%L ○○○○□-○(○)	G16	Toolholder (Grooving)
KGHS%L ○○○○□-○	G16	Toolholder (Grooving)
KGIAR ○○H	G48	Toolholder (Grooving/Toolholder Body)
KGIAR ○○○○B-○	G48	Toolholder (Grooving)
KGM%L ○○○○□-○	G23, H13	Toolholder (Grooving/Plunge&Turn)
KGM%L ○○○○□-○T○○	G23, H13	Toolholder (Grooving/Plunge&Turn)
KGM%L ○○○○□-○-○○○	G22, H12	Toolholder (Grooving/Plunge&Turn)
KGMM%L ○○○○□-○	G24	Toolholder (Grooving/Plunge&Turn)
KGMS%L ○○○○□-○	G24	Toolholder (Grooving/Plunge&Turn)
KGMU%L ○○○○□	G25	Toolholder (Grooving/Plunge&Turn)
KGMW%L ○○○○□-○	G27	Toolholder (Grooving/Plunge&Turn)
KIGBA%L ○○○○-○○	G43	Toolholder (Grooving)
KIGH%L ○○○○B-○	G45	Toolholder (Grooving)
KIGM%L ○○○○B-○	G47	Toolholder (Grooving/Plunge&Turn)
KIGM%L ○○○○B-○V	G46	Toolholder (Grooving/Plunge&Turn)
KIGMU%L ○○○○B-○	G47	Toolholder (Grooving/Plunge&Turn)
KITG%L ○○○○T-○○	G44, J23	Toolholder (Grooving/Threading)
KN91%L ○○-○	G26	Toolholder (Grooving)
KNMX ○○○○○○%L-1	B24	Insert (Turning)
KPS-42	E28, F60, P8	Spare Parts (Shim)
KPT-32	E29, F61, P8	Spare Parts (Shim)
KPT-42	M41, P8	Spare Parts (Shim)
KTG%L ○○○○□22-○○	G15	Toolholder (Grooving)
KTG%L ○○○○□-○○	G15	Toolholder (Grooving)
KTGF%L ○○○○□-○○	G12	Toolholder (Grooving)
KTGF%L ○○○○□-○○F	G12	Toolholder (Grooving)
KTKB ○○-OS	H18	Blade (Cut-Off)
KTKB ○○-OSS	H18	Blade (Cut-Off)
KTKB%L ○○-OS	H18	Blade (Cut-Off)
KTKF%L ○○○○□-○○	E6, H6, J18	Toolholder (Back Turning/Cut-Off/Threading)
KTKFS%L ○○○○□-○○□	H8	Toolholder (Cut-Off)
KTKH%L ○○○○□-OS	H17	Toolholder (Cut-Off)
KTKH%L ○○○○□-OT○○S	H17	Toolholder (Cut-Off)
KTKH%L ○○○○□-○-○○○B	H17	Toolholder (Cut-Off)
KTKH%L ○○○○□-○-○○○S	H17	Toolholder (Cut-Off)
KTKTB ○○-○○	H19	Block (Cut-Off)
KTKTBF ○○-○○	H19	Block (Cut-Off)
KTN%L ○○○○□-○○	J16	Toolholder (Threading)
KTNS%L ○○○○□-○○	J16	Toolholder (Threading)
KTT%L ○○○○□-○○	J22	Toolholder (Threading)
KTTXR ○○○○□-○○F	J20	Toolholder (Threading)
KVN-32	D18, P8	Spare Parts (Shim)
L		
LC-32	P8	Spare Parts (Shim)
LC-42	N6, P8	Spare Parts (Shim)
LC-53	P8	Spare Parts (Shim)
LC-4K	F42	Spare Parts (Shim)
LC-32N	D8, F66, P8	Spare Parts (Shim)
LC-42N	D8, N6, P8	Spare Parts (Shim)
LC-53N	D8, P8	Spare Parts (Shim)
LC-42%L	P8	Spare Parts (Shim)
LC-42N%L	F66, P8	Spare Parts (Shim)
LD-32	P8	Spare Parts (Shim)
LD-42	D11, N6, N7, P8	Spare Parts (Shim)
LD-43	D11, P8	Spare Parts (Shim)
LD-4K	F43	Spare Parts (Shim)
LD-4K43	F43	Spare Parts (Shim)
LD-32N	D11, F67, P8	Spare Parts (Shim)
LD-42-20	D11, P8	Spare Parts (Shim)
LD-43-20	D11, P8	Spare Parts (Shim)
LGBA-16%L S	G9, G43, N10, P15	Spare Parts (Clamp Set)
LGBA-22%L S	G9, G43, N10, P15	Spare Parts (Clamp Set)
LL-03	P7	Spare Parts (Lock Pin)
LL-03N	D14, P7	Spare Parts (Lock Pin)
LL-03S	P7	Spare Parts (Lock Pin)
LL-03T	P7	Spare Parts (Lock Pin)
LL-03SN	F66, F68, F69, P7	Spare Parts (Lock Pin)
LL-03TN	D14, F68, P7	Spare Parts (Lock Pin)
LL-05C	D19, P7	Spare Parts (Lock Pin)
LL-1	N7, P7	Spare Parts (Lock Pin)

Description	Page	Category
LL-2	N6, N8, P7	Spare Parts (Lock Pin)
LL-3	N6, N7, P7	Spare Parts (Lock Pin)
LL-4	D11, P7	Spare Parts (Lock Pin)
LL-5	P7	Spare Parts (Lock Pin)
LL-1C	P7	Spare Parts (Lock Pin)
LL-1D	P7	Spare Parts (Lock Pin)
LL-1N	D8, D12, D13, D14, D19, D20, F66, F68, F69, N7, P7	Spare Parts (Lock Pin)
LL-2C	D37, P7	Spare Parts (Lock Pin)
LL-1K	F43	Spare Parts (Lock Pin)
LL-2K	F42	Spare Parts (Lock Pin)
LL-3K	F43	Spare Parts (Lock Pin)
LL-2N	D8, D12, D13, D14, D19, D20, F66, F70, N6, N8, P7	Spare Parts (Lock Pin)
LL-3N	D11, N6, N7, P7	Spare Parts (Lock Pin)
LL-5N	D8, P7	Spare Parts (Lock Pin)
LL-1CN	D19, D37, P7	Spare Parts (Lock Pin)
LL-1DN	D11, F67, P7	Spare Parts (Lock Pin)
LNEU ○○○○-○○	M102	Insert (Milling)
LNEU ○○○○-○○S	M102	Insert (Milling)
LNUN ○○○○○○	B89	Insert (Turning) / Previous Description
LNUN ○○○○○○P○○○○○	B89	Insert (Turning)
LOF07R	M25	Spare Parts (Cartridge)
LP-2S	D18, P7	Spare Parts (Lock Pin)
LP-6S	D18, P7	Spare Parts (Lock Pin)
LPA-11	E8, E9, E10, P7	Spare Parts (Anchor Pin)
LPA-13	E8, E9, E10, P7	Spare Parts (Anchor Pin)
LPA-17	E8, E9, E10, P7	Spare Parts (Anchor Pin)
LPF-11	E11, E14, E20, E23, E24, P7	Spare Parts (Anchor Pin)
LPF-13	E11, E14, E20, P7	Spare Parts (Anchor Pin)
LPF-17	E11, E14, E20, P7	Spare Parts (Anchor Pin)
LPF-1113	E23, E24, P7	Spare Parts (Anchor Pin)
LPF-1117	E23, E24, P7	Spare Parts (Anchor Pin)
LR-80	D19, P8	Spare Parts (Shim)
LR-81	D19, P8	Spare Parts (Shim)
LR-10C	D19, P8	Spare Parts (Shim)
LR-12C	D19, D37, P8	Spare Parts (Shim)
LR-16C	D37, P8	Spare Parts (Shim)
LS-03	P3	Spare Parts (Lock Screw)
LS-05	D19, P3	Spare Parts (Lock Screw)
LS-1	N7, P4	Spare Parts (Lock Screw)
LS-2	N6, N7, N8, P4	Spare Parts (Lock Screw)
LS-3	D11, P4	Spare Parts (Lock Screw)
LS-4	P4	Spare Parts (Lock Screw)
LS-11	D18, P4	Spare Parts (Lock Screw)
LS-15	D18, P4	Spare Parts (Lock Screw)
LS-32	D12, D13, P8	Spare Parts (Shim)
LS-42	D12, D13, P8	Spare Parts (Shim)
LS-03N	D14, P3	Spare Parts (Lock Screw)
LS-1N	D8, D11, D12, D13, D14, D19, D20, D37, F68, N7, P4	Spare Parts (Lock Screw)
LS-2N	D8, D11, D12, D13, D14, D19, D20, F66, F70, N6, N7, N8, P4	Spare Parts (Lock Screw)
LS-4N	D8, P4	Spare Parts (Lock Screw)
LS-1P	F43	Spare Parts (Lock Screw)
LS-2P	F42	Spare Parts (Lock Screw)
LS-3P	F43	Spare Parts (Lock Screw)
LS-03S	P3	Spare Parts (Lock Screw)
LS-1S	P4	Spare Parts (Lock Screw)
LS-1T	D37, P4	Spare Parts (Lock Screw)
LS-03SN	D14, F66, F68, F69, P3	Spare Parts (Lock Screw)
LS-1SN	F66, F67, F69, P4	Spare Parts (Lock Screw)
LSD-445R	M31, P12	Spare Parts (Cartridge)