

Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
LSE-445R	P12	Spare Parts (Cartridge)
LSE-445SR	M28	Spare Parts (Cartridge)
LSO-445R	M33, P12	Spare Parts (Cartridge)
LSP-1	D8, D11, D12, D13, D14, D19, D20, D37, F66, F67, F68, F69, N7, P7	Spare Parts (Shim Pin)
LSP-2	D8, D11, D12, D13, D14, D19, D20, D37, F66, F70, F6, F7, N8, P7	Spare Parts (Shim Pin)
LSP-3	D8, P7	Spare Parts (Shim Pin)
LSP-2K	F43	Spare Parts (Shim Pin)
LSP-3K	F42, F43	Spare Parts (Shim Pin)
LSP-415R	M39, P12	Spare Parts (Cartridge)
LT-32	N7, P8	Spare Parts (Shim)
LT-42	P8	Spare Parts (Shim)
LT-3K	F43	Spare Parts (Shim)
LT-32N	D14, F68, N7, P8	Spare Parts (Shim)
LT-42N	D14, P8	Spare Parts (Shim)
LT-32N-20	D14, F68, P8	Spare Parts (Shim)
LT-42N-20	D14, P8	Spare Parts (Shim)
LTE-490R	M41, P12	Spare Parts (Cartridge)
LTE-490SR	M40	Spare Parts (Cartridge)
LTK-5	G69, H17, P18	Spare Parts (Wrench)
LTP-10	F43	Spare Parts (Trox Plus Wrench / L-shape type)
LTP-15	F42, F43	Spare Parts (Trox Plus Wrench / L-shape type)
LTW-8SS	E5, P17	Spare Parts (Trox Wrench / L-shape type)
LTW-10S	E6, F9, F12, F13, F17, G55, H6, H8, J18, P17	Spare Parts (Trox Wrench / L-shape type)
LTW-10SS	E4, P17	Spare Parts (Trox Wrench / L-shape type)
LTW-15S	G22, H12, P17	Spare Parts (Trox Wrench / L-shape type)
LTW-20	E12, F71, G22, G23, G24, G46, H12, H13, H17, M134, P17	Spare Parts (Trox Wrench / L-shape type)
LW-1.5	P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-2	P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-2.5	P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-3	G15, K47, P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-4	P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-4.5	M42, P17	Spare Parts (Wrench/for Clamp Screw)
LW-5	G26, G27, K47, P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-6	P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-8	N11, P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-10	M69, M130, P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-14	M74, P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-17	M74, P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-19	M74, P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-32	P9	Spare Parts (Shim)
LW-42	N8, P9	Spare Parts (Shim)
LW-32N	D20, F69, P9	Spare Parts (Shim)
LW-42N	D20, N8, P9	Spare Parts (Shim)
LW-42N ⁹ /L	F70, P9	Spare Parts (Shim)
LW-42 ⁹ /L	P9	Spare Parts (Shim)
M		
M3X 8	D22, D23, D25, D26, D27, D28, D29, D30, D31, D33, D34, D35, F72, F73, P4	Spare Parts (Screw)
M3X12	D22, D25, D26, D27, D33, D34, D35, F72, P4	Spare Parts (Screw)
M4X10	D22, D25, D27, D30, D31, P4	Spare Parts (Screw)
MAP-1806	M38	Spare Parts (Cartridge)
MAP-2506	M62, M63, P11	Spare Parts (Shim)

Description	Page	Category
MCSE ○○○	M134	Endmill (Chamfering)
MCSE ○○○-W	M134	Endmill (Chamfering)
MCSE ○○○-○○D	M134	Endmill (Chamfering)
MEA ○○-S○○	M83	Endmill
MEA ○○-S○○-(○○○)W(-○T)	M83	Endmill
MEA ○○-S○○-Z○	M83	Endmill
MEA ○○-S○○-○○○	M83	Endmill
MEAL ○○-S○○	M84	Endmill (for Aluminum Machining)
MEB ○○-S○○	M83	Endmill
MEB ○○-S○○-(○○○)W(-○T)	M83	Endmill
MEC ○○-S○○-○○	M45	Endmill (MEC)
MEC ○○-S○○-○○T	M45	Endmill (MEC)
MEC ○○-S○○-○○○-○○	M45	Endmill (MEC)
MEC ○○-S○○-○○○-○○T	M45	Endmill (MEC)
MEC ○○-W○○-○○○○(-H)	M44	Endmill (MEC)
MEC ○○○R-○○-○□-M	M46	Face Mill (MEC)
MEC ○○○R-○○-○(○)□	M46	Face Mill (MEC)
MECH ○○○-S○○-○○-○-○T	M56	Endmill (MECH)
MECH ○○○R-○○-○-○-○T	M57	Shell Mill (MECH)
MECH ○○○R-○○-○-○-○T-M	M57	Shell Mill (MECH)
MECH ○○○R○○-○-○T-BT○○	M57	Endmill (MECH)
MECH ○○○-W○○-○○-○-○-○T	M56	Endmill (MECH)
MECX ○○-S○○-○○-○T	M52	Endmill (MECX)
MECX ○○-S○○-○○○-○○-○T	M52	Endmill (MECX)
MECX ○○○R-○○-○○T-M	M53	Face Mill (MECX)
MEF ○○-S○○	M136	Endmill (Countersinking)
MEF ○○-S○○-○○(○)W	M136	Endmill (Countersinking)
METS ○○-S○○	M138	Endmill (T-Slotting)
METS ○○-S○○-H	M138	Endmill (T-Slotting)
MEY ○○-S○○	M86	Endmill (3-D Endmill)
MEY ○○-S○○-○○○	M87	Endmill (3-D Endmill)
MEY ○○-S○○-○○○H	M86	Endmill (3-D Endmill)
MEY ○○-S○○-○○(○)W-H	M86	Endmill (3-D Endmill)
MEZ ○○-S○○G	M91	Endmill (3-D Endmill)
MEZ ○○-S○○-○○○G(W)	M91	Endmill (3-D Endmill)
MEZ ○○-S○○-○○(○)GW-H	M91	Endmill (3-D Endmill)
MEZ ○○-S○○-○○○HG	M91	Endmill (3-D Endmill)
MGI ○○○○-1□(□)	M132	Endmill (Grooving for M/C)
MHD ○○S-S○○-C	M67	Endmill (Helical "Plus Mill")
MHD ○○(○)-F	M69, M74	Front Piece "Plus Mill"
MHD ○○(○)-BT50-A	M73	Endmill (Helical "Plus Mill")
MHD ○○(○)-BT50-SA	M72	Endmill (Helical "Plus Mill")
MHD ○○(○)-FMA-A	M73	Endmill (Helical "Plus Mill")
MHD ○○(○)-FMA-SA	M72	Endmill (Helical "Plus Mill")
MHD ○○-○RF	M129	Front Piece of "Plus Mill"
MHD ○○-S○○-A	M68	Endmill (Helical "Plus Mill")
MHD ○○-S○○-B	M68	Endmill (Helical "Plus Mill")
MHD ○○-S○○-C	M67	Endmill (Helical "Plus Mill")
MHD ○○-S○○-SA	M67	Endmill (Helical "Plus Mill")
MHD ○○-S○○-SB	M67	Endmill (Helical "Plus Mill")
MHD ○○-S○○-ORSA	M129	Endmill (Helical "Plus Mill")
MHD ○○-S○○-A-○○○	M68	Endmill (Helical "Plus Mill")
MOF ○○○○○R-○○-○T	M22	Face Mill
MOF ○○○○○R-○○-○T-M	M22	Face Mill
MOFX ○○○○○R-○○-○(○)T-SF	M25	Face Mill
MOFX ○○○○○□○○-○(○)T-MSF	M25	Face Mill
MP-1	M38, M56, M57, M62, M63, M69, M74, M86, M87, M101, M112, M113, M120, M130	Spare Parts (Anti-seize Compound)
MRF ○○-S○○	M120	Endmill (Ball-Nose)
MRF ○○-S○○-○○○	M120	Endmill (Ball-Nose)
MRFW ○○-S○○	M120	Endmill (Ball-Nose)
MRFW ○○-S○○-○○○	M120	Endmill (Ball-Nose)
MRP ○○○R-○○	M124	Face Mill ("Radius Mill")
MRP ○○○R-○○-○T	M124	Face Mill ("Radius Mill")
MRP ○○○R-○○○E-○T	M124	Face Mill ("Radius Mill")
MRP ○○○-S○○-○○	M123	Endmill (Radius Mill)
MRP ○○○-S○○-○○-○T	M123	Endmill (Radius Mill)
MRP ○○○-S○○-○○-○T-○○○	M123	Endmill (Radius Mill)
MRP ○○○-S○○-○○-○○○	M123	Endmill (Radius Mill)
MRP ○○○-W○○-○T○○○-○○(○)	M123	Endmill (Radius Mill)
MSD 45○○	M31	Face Mill (with Shank)
MSD 45○○-32	M31	Face Mill (with Shank)
MSD 45○○(○○)R	M31	Face Mill

S

Index

Index