

Description	Page	Category
SB-2290TR	K38, P4	Spare Parts (Screw)
SB-2545TR	F25, F31, F33, F41, F49, F50, F65, M44, M45, M78, P4	Spare Parts (Screw)
SB-2560TR	E13, E19, F29, F30, F31, F34, F51, F52, F65, M69, M83, M130, M138, P4	Spare Parts (Screw)
SB-2570TR	E5, E12, E13, E15, E16, E17, E21, E22, E23, E24, E25, E26, E27, F37, F39, F63, G36, G37, G38, K24, K26, K28, K30, K40, K42, K44, P4	Spare Parts (Screw)
SB-25100TR	K38, P4	Spare Parts (Screw)
SB-3060TR	F27, F33, M34, M78, M123, M134, M138, P4	Spare Parts (Screw)
SB-3080TR	D14, E4, E8, E9, E10, E22, F9, F12, F13, F14, F17, F44, G36, G55, K24, K26, K28, K30, M43, M69, M74, M123, M124, M130, M136, P4	Spare Parts (Screw)
SB-4060TR	M78, M79, P5	Spare Parts (Screw)
SB-4065TR	E13, F25, F27, F29, F30, F31, F33, F41, F65, M78, M79, M132, P4	Spare Parts (Screw)
SB-4085TR	D8, D10, D12, D16, D20, E12, E15, E16, E17, E19, E21, F51, F52, G36, J17, K25, K26, K28, K30, K40, K42, K44, K46, M83, M123, M124, M130, M132, M138, P5	Spare Parts (Screw)
SB-5070TR	M134, P5	Spare Parts (Screw)
SB-5085TR	K25, K27, K29, K30, K41, K42, K43, K44, K45, K46, K47, M43, M80, P5	Spare Parts (Screw)
SB-5090TR	E12, F71, K25, K27, K29, K30, M134, P5	Spare Parts (Screw)
SB-40115TR	M123, M124, P5	Spare Parts (Screw)
SB-40140TR	G48, M38, M62, M63, P5	Spare Parts (Screw)
SB-45130TR	M42, P5	Spare Parts (Screw)
SB-50120TR	M123, M124, P5	Spare Parts (Screw)
SB-60120TR	K25, K27, K29, K30, K41, K43, K47, M38, M62, M63, M124, P5	Spare Parts (Screw)
SB-4082TPR	M22, P5	Spare Parts (Screw)
SB-2035TRG	M52, P4	Spare Parts (Screw)
SB-2040TRG	M86, M87, M91, P4	Spare Parts (Screw)
SB-2042TRG	K24, K26, K28, K30, M52, M53, P4	Spare Parts (Screw)
SB-2555TRG	M44, M45, M46, M56, M57, M86, M87, M91, P4	Spare Parts (Screw)
SB-3060TRG	P4	Spare Parts (Screw)
SB-3070TRG	M86, M87, M91, P4	Spare Parts (Screw)
SB-4070TRG	M86, M87, M91, P5	Spare Parts (Screw)
SB-2045TRN	G36, G37, P4	Spare Parts (Screw)
SB-4050TRN	H8, P5	Spare Parts (Screw)
SB-4070TRN	M44, M45, M46, M56, M57, P5	Spare Parts (Screw)
SB-40125TRN	E23, E24, F37, F39, F63, N9, P5	Spare Parts (Screw)
SB-3590TRP	M112, M113	Spare Parts (Screw)
SB-4070TRS	G12, G13, J22, P5	Spare Parts (Screw)
SB-50120TRS	M22, P5	Spare Parts (Screw)

Description	Page	Category
SB-4070TRW	G12, J20, P5	Spare Parts (Screw)
SB-4590TRWN	E6, H6, J18, P5	Spare Parts (Screw)
SC-30067	M120, P5	Spare Parts (Screw)
SC-35085	M120, P5	Spare Parts (Screw)
SC-40100	M120, P5	Spare Parts (Screw)
SC-50130	M120, P5	Spare Parts (Screw)
SC-60160	M120, P5	Spare Parts (Screw)
SC-60210	M120, P5	Spare Parts (Screw)
SCAC%L ○○○○□-○○	E12	Toolholder (Turning)
SCAC%L ○○○○□-○○FF	E12	Toolholder (Turning)
SCGT ○○○○○○%L-A3	B58	Insert (Turning)
SCLC%L ○○○○□-○○	E12	Toolholder (Turning)
SCLC%L ○○○○B-○○	F49	Boring Bar / Previous Description
SCLC%L ○○○○B-○○E	F49	Boring Bar / Previous Description
SCLC%L ○○○○B-○○W	F49	Boring Bar / Previous Description
SCLC%L ○○○○B-○○EH	F50	Boring Bar / Previous Description
SCLC%L ○○○○B-○○WH	F50	Boring Bar / Previous Description
SCLNR ○○○○□-○○FF	E4	Toolholder (for Small Double-Sided Tools)
SCLP%L ○○○○B-○○	F49	Boring Bar / Previous Description
SCLP%L ○○○○B-○○E	F49	Boring Bar / Previous Description
SCLP%L ○○○○B-○○W	F49	Boring Bar / Previous Description
SCLP%L ○○○○B-○○EH	F50	Boring Bar / Previous Description
SCLP%L ○○○○B-○○WH	F50	Boring Bar / Previous Description
SCLP%L ○○○○B-○○W-○/○	F49	Boring Bar / Previous Description
SCMT ○○○○○○HQ	B58	Insert (Turning)
SDCN ○○○○AUTN	M10	Insert (Milling)
SDCT ○○○○□□-□□	M115	Insert (Milling)
SDCT ○○○○□%L-□□	M115	Insert (Milling)
SDET ○○○○□□-□□	M115	Insert (Milling)
SDET ○○○○□%L-□□	M115	Insert (Milling)
SDJC%L ○○○○□-○○	E15	Toolholder (Turning)
SDJC%L ○○○○□-○○F	E15	Toolholder (Turning)
SDLNR ○○○○□-○○FF	E4	Toolholder (for Small Double-Sided Tools)
SDKN ○○○○AUFN	C27, M10, M21	Insert (Milling)
SDKN ○○○○AUTN	M10	Insert (Milling)
SDKN ○○○○AUFN-NE	C27, M21	Insert (Milling)
SDKR ○○○○AUEN-S	M10	Insert (Milling)
SDKW ○○○○○○FN	M13	Insert (Milling)
SDKW ○○○○○○TN	M13	Insert (Milling)
SDKW ○○○○○○AESN	M13	Insert (Milling)
SDKW ○○○○○○AETN	M13	Insert (Milling)
SDLC%L ○○○○□-○○FF	E16	Toolholder (Turning)
SDLP%L ○○○○□-○○F(F)	E16	Toolholder (Turning)
SDMR ○○○○AUER-H	M10	Insert (Milling)
SDMT ○○○○AESR-H	M13	Insert (Milling)
SDMT ○○○○E-K	M13	Insert (Milling)
SDMT ○○○○C	M13	Insert (Milling)
SDNCN ○○○○□-○○	E21	Toolholder (Turning)
SDNC%L ○○○○□-○○F	E21	Toolholder (Turning)
SDUC%L ○○○○B-○○	F51	Boring Bar / Previous Description
SDUC%L ○○○○B-○○E	F51	Boring Bar / Previous Description
SDUC%L ○○○○B-○○W	F51	Boring Bar / Previous Description
SDXC%L ○○○○□-○○	E17	Toolholder (Turning)
SDZC%L ○○○○B-○○	F52	Boring Bar / Previous Description
SDZC%L ○○○○B-○○E	F52	Boring Bar / Previous Description
SE-3070TRP	M112, M113	Spare Parts (Screw)
SE-40050TR	M101, M102	Spare Parts (Screw)
SE-40055TR	M101, M102	Spare Parts (Screw)
SE-40068TR	M101, M102	Spare Parts (Screw)
SE-40080TR	M102	Spare Parts (Screw)
SE-40090TR	M101, M102	Spare Parts (Screw)
SE-40100TR	M102	Spare Parts (Screw)
SE-40120TR	G22, H12, H17, P5	Spare Parts (Screw)
SE-50125TR	G22, H12, H17, P5	Spare Parts (Screw)
SEEN ○○○○AFFN	C27, M21	Insert (Milling)
SEEN ○○○○AFTN	M10	Insert (Milling)
SEEN ○○○○AFFN-NE	C27, M21	Insert (Milling)
SEEN ○○○○AFFR-W	C27, M10, M21	Insert (Milling)
SEEN ○○○○AFFR-W	M10	Insert (Milling)
SEGN ○○○○○○	C23	Insert (Milling)
SEGN ○○○○○○NE	C23	Insert (Milling)
SEKN ○○○○AFFN	M10	Insert (Milling)
SEKN ○○○○AFTN	M10	Insert (Milling)
SEKN ○○○○EFTR	M10	Insert (Milling)