

Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
SEKR ○○○○AFEN-S	M10	Insert (Milling)
SEKT ○○○○AFEN-S	M13	Insert (Milling)
SEKW ○○○○○○FN	M13	Insert (Milling)
SEKW ○○○○○○TN	M13	Insert (Milling)
SEKW ○○○○AFTN	M13	Insert (Milling)
SEMM ○○○○○○PESR	M14	Insert (Milling)
SEMR ○○○○AFER-H	M10	Insert (Milling)
SEMT ○○○○○○C	M13	Insert (Milling)
SF%/- ○○○(○)□	G62, G63, G64	Blade (Grooving)
SH- ○○○○	F75	Sleeve (for Boring Bar / Previous description)
SH ○○○○-○○○	F75	Sleeve (for Boring Bar)
SH- 50150TR	M25, P5	Spare Parts (Cartridge Clamp Screw)
SHA ○○○○-○○○	G38	Sleeve (for Automatic Lathe SIGE)
SHA ○○○○.○-○○○	G38	Sleeve (for Automatic Lathe SIGE)
SHC- ○○○○○○	F76	Coolant Sleeve (for Boring Bar / Previous description)
SHC ○○○○-○○	F76	Coolant Sleeve (for Boring Bar)
SHE ○○○○-○○	K33	Adjustable Sleeve (for Magic Drill)
SHEM ○○○○-○○	K39	Adjustable Sleeve (for Magic Drill)
SHL- ○	F76	Spare Parts (Back Cover)
SIGE%/- ○○○○□-EH	G36	Toolholder (Grooving)
SIGE%/- ○○○○□-WH	G37	Toolholder (Grooving)
SIGER ○○○○□-WH-90	G38	Toolholder (Grooving / for Automatic Lathe)
SIN%/- ○○○○S-○○	J17	Toolholder (Threading)
SIN%/- ○○○○S-○○E	J17	Toolholder (Threading)
SIT%/- ○○○○-○○	F57, J28	Toolholder (Boring / Threading)
SJLC%/- ○○○○B-○○W	F53	Boring Bar / Previous Description
SJS- ○	F76	Coolant Joint
SJZC%/- ○○○○B-○○W	F53	Boring Bar / Previous Description
SLT ○○-○○□□□	M98	Insert (Slot Mill MSTA)
SNCN ○○○○XNTN	M12	Insert (Milling)
SNGA ○○○○○○	B27, B84	Insert (Turning)
SNGA ○○○○○○ME	C7	Insert (Turning) / Previous Description
SNGA ○○○○○○ME-T	C7	Insert (Turning) / Previous Description
SNGA ○○○○○○S○○○○○	B84	Insert (Turning)
SNGA ○○○○○○T○○○○○	B84	Insert (Turning)
SNGA ○○○○○○S○○○○○ME	C7	Insert (Turning)
SNGA ○○○○○○S○○○○○MET	C7	Insert (Turning)
SNGA ○○○○○○T○○○○○ME	C7	Insert (Turning)
SNGG ○○○○○○%/-25R	B27	Insert (Turning)
SNGG ○○○○○○%/-B/C	B27, B42	Insert (Turning)
SNGN ○○○○○○	B84, B85	Insert (Turning)
SNGN ○○○○○○K	B85	Insert (Turning) / Previous Description
SNGN ○○○○○○P○○○○○	B85	Insert (Turning)
SNGN ○○○○○○S○○○○○	B84, B85	Insert (Turning)
SNGN ○○○○○○T○○○○○	B84, B85	Insert (Turning / Milling)
SNGN ○○○○○○T○○○	B84	Insert (Turning)
SNGX ○○○○○○T○○○○○	B85	Insert (Turning)
SNKN ○○○○XNTN	M12	Insert (Milling)
SNMA ○○○○○○	B27, B42	Insert (Turning)
SNMA ○○○○○○S○○○○○	B84	Insert (Turning)
SNMA ○○○○○○T○○○	B84	Insert (Turning)
SNMF ○○○○○○-21	B73, D38	Insert (Turning)
SNMF ○○○○XNTN	M12	Insert (Milling)
SNMG ○○○○○○	B25, B42	Insert (Turning)
SNMG ○○○○○○C	B27	Insert (Turning)
SNMG ○○○○○○GC	B27	Insert (Turning)
SNMG ○○○○○○HK	B25	Insert (Turning)
SNMG ○○○○○○HQ	B25, B42	Insert (Turning)
SNMG ○○○○○○HS	B25, B42	Insert (Turning)
SNMG ○○○○○○HT	B25, B42	Insert (Turning)
SNMG ○○○○○○MQ	B26	Insert (Turning)
SNMG ○○○○○○MS	B26	Insert (Turning)
SNMG ○○○○○○PH	B25	Insert (Turning)
SNMG ○○○○○○PS	B25	Insert (Turning)
SNMG ○○○○○○PT	B25	Insert (Turning)
SNMG ○○○○○○%/-C	B27	Insert (Turning)
SNMG ○○○○○○%/-ST	B26	Insert (Turning)
SNMG ○○○○○○XP	B26, B42	Insert (Turning)
SNMG ○○○○○○XQ	B26, B42	Insert (Turning)
SNMG ○○○○○○XS	B26, B42	Insert (Turning)
SNMG ○○○○○○ZS	B27	Insert (Turning)
SNMM ○○○○○○PX	B26	Insert (Turning)
SNMN ○○○○○○	B27, B42, B85, C9, M11	Insert (Turning / Milling)

Description	Page	Category
SNMN ○○○○○○S○○○○○	C9	Insert (Turning)
SNMN ○○○○○○T○○○○○	B79	Insert (Turning)
SOKN 13T3AXFN	M11	Insert (Milling)
SOKN 13T3AXFN-NE	C27, M21	Insert (Milling)
SOKN 13T3AXTN	M11	Insert (Milling)
SOKR 13T3AXEN-J	M10	Insert (Milling)
SOMT 0903AXEN-J	M14	Insert (Milling)
SOMW 0903AXFN	M14	Insert (Milling)
SOMW 0903AXTN	M14	Insert (Milling)
SP-2D	D14	Spare Parts (Spring)
SP-3D	D8, D10, D12, D20	Spare Parts (Spring)
SP-5D	D16	Spare Parts (Spring)
SP3X4	F12, F14, F17, P5	Spare Parts (Clamp Screw)
SP3X6	M32, M33, P5	Spare Parts (Screw)
SP3X8	D38, E28, E29, J16, J17, M27, M31, M39, M41, N10, P5	Spare Parts (Screw)
SP3X10	F60, F61, F72, P5	Spare Parts (Screw)
SP4X9	M26, P5	Spare Parts (Clamp Screw)
SP8X35	M24, P5	Spare Parts (Clamp Bolt for BT50 Arbor)
SP-5	G48, P19	Spare Parts (Spring)
SP-6	G11, G16, G17, G45, P19	Spare Parts (Spring)
SP-8	G26, P19	Spare Parts (Spring)
SP-129	D34, D35, P9	Spare Parts (Shim)
SP-141	D25, D30, D31, D34, D35, P9	Spare Parts (Shim)
SP-143	D25, D34, D35, P9	Spare Parts (Shim)
SP-148	D34, D35, P9	Spare Parts (Shim)
SP-162	D25, D30, D31, P9	Spare Parts (Shim)
SP-219	D36, P9	Spare Parts (Shim)
SP-221	D26, P10	Spare Parts (Shim)
SP-223	D26, P10	Spare Parts (Shim)
SP-342	D23, P10	Spare Parts (Shim)
SP-429	D32, P10	Spare Parts (Shim)
SP-441	D22, D28, P10	Spare Parts (Shim)
SP-443	D22, P10	Spare Parts (Shim)
SP-454	D22, P10	Spare Parts (Shim)
SP-521	D29, P10	Spare Parts (Shim)
SP-523	P10	Spare Parts (Shim)
SP-541	D29, P10	Spare Parts (Shim)
SP-543	P10	Spare Parts (Shim)
SP-826	D33, P10	Spare Parts (Shim)
SP-829	D33, P10	Spare Parts (Shim)
SP-841	D27, D33, P10	Spare Parts (Shim)
SP-843	D27, D33, P10	Spare Parts (Shim)
SP-849	D33, P10	Spare Parts (Shim)
SP-861	D27, P10	Spare Parts (Shim)
SP-130A	F74, P10	Spare Parts (Shim)
SP-210A	F74, P10	Spare Parts (Shim)
SP-420A	F74, P10	Spare Parts (Shim)
SP-141P	F72, F73, P10	Spare Parts (Shim)
SP-143P	F72, P10	Spare Parts (Shim)
SP-230P	F72, P10	Spare Parts (Shim)
SP-341P	F72, P10	Spare Parts (Shim)
SP-441P	F73, P11	Spare Parts (Shim)
SP-443P	P11	Spare Parts (Shim)
SP-521P	F73, P11	Spare Parts (Shim)
SP-523P	P11	Spare Parts (Shim)
SPCN ○○○○EDTR	M11	Insert (Milling)
SPCN ○○○○EETR1	M11	Insert (Milling)
SPCN ○○○○XPTR	M11	Insert (Milling)
SPCT ○○T○○○□□-□□	M114	Insert (Milling)
SPCT ○○T○○○□□%-□□	M114	Insert (Milling)
SPEN ○○○○EESR	M11	Insert (Milling)
SPET ○○T○○○□□%-□□	M114	Insert (Milling)
SPGH ○○○○○○%/-	B58	Insert (Turning)
SPGN ○○○○○○	B58, B88, C15, C23, M11	Insert (Turning / Milling)
SPGN ○○○○○○NE	C23	Insert (Turning)
SPGN ○○○○○○S○○○○○	B88	Insert (Turning)