

Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
WBGW ○○○○○○S○○○○○%-SET	C14	Insert (Turning)
WBGW ○○○○○○T○○○○○%-SE	C14	Insert (Turning)
WBMT ○○○○○○L-NE	C22	Insert (Turning)
WBMT ○○○○○○L	C22	Insert (Turning)
WBMT ○○○○○○%-DP	B70, B78	Insert (Turning)
WC- ○○	M112, M113	Spare Parts (Wedge)
WCGT ○○○○○○%-F	B70	Insert (Turning)
WCMT ○○○○○○	M15	Insert (Turning)
WCS-1N	D15, N7, P15	Spare Parts (Clamp Set)
WCS-8	D20, F70, N8, P15	Spare Parts (Clamp Set)
WDR□(○)	K9	Spare Parts (Wrench / for "Magic Drill DRC")
WN-1	D15, D20, N7, N8, P19	Spare Parts (Shim Nut)
WNGA ○○○○○○	B87	Insert (Turning) / Previous Description
WNGA ○○○○○○ME	C8	Insert (Turning) / Previous Description
WNGA ○○○○○○ME-T	C8	Insert (Turning) / Previous Description
WNGA ○○○○○○SE	C8	Insert (Turning) / Previous Description
WNGA ○○○○○○SE-T	C8	Insert (Turning) / Previous Description
WNGA ○○○○○○S○○○○○	B87	Insert (Turning)
WNGA ○○○○○○S○○○○○ME	C8	Insert (Turning)
WNGA ○○○○○○S○○○○○MET	C8	Insert (Turning)
WNGA ○○○○○○S○○○○○SE	C8	Insert (Turning)
WNGA ○○○○○○S○○○○○SET	C8	Insert (Turning)
WNGA ○○○○○○T○○○○○	B87	Insert (Turning)
WNGA ○○○○○○T○○○○○ME	C8	Insert (Turning)
WNGG ○○○○○○AH	B37	Insert (Turning)
WNGG ○○○○○○%	B37, B44	Insert (Turning)
WNGG ○○○○○○%-S	B37, B44	Insert (Turning)
WNMA ○○○○○○	B37, B44	Insert (Turning)
WNMG ○○○○○○	B36, B44	Insert (Turning)
WNMG ○○○○○○C	B37	Insert (Turning)
WNMG ○○○○○○CJ	B35	Insert (Turning)
WNMG ○○○○○○CQ	B35, B44	Insert (Turning)
WNMG ○○○○○○CS	B35, B44	Insert (Turning)
WNMG ○○○○○○GC	B37	Insert (Turning)
WNMG ○○○○○○GP	B35, B44	Insert (Turning)
WNMG ○○○○○○GS	B35, B44	Insert (Turning)
WNMG ○○○○○○GT	B36, B44	Insert (Turning)
WNMG ○○○○○○GU	B36	Insert (Turning)
WNMG ○○○○○○HQ	B35, B44	Insert (Turning)
WNMG ○○○○○○HS	B36, B44	Insert (Turning)
WNMG ○○○○○○HT	B36, B44	Insert (Turning)
WNMG ○○○○○○HU	B36	Insert (Turning)
WNMG ○○○○○○MQ	B37	Insert (Turning)
WNMG ○○○○○○MS	B37	Insert (Turning)
WNMG ○○○○○○MU	B37	Insert (Turning)
WNMG ○○○○○○PS	B36	Insert (Turning)
WNMG ○○○○○○PT	B36	Insert (Turning)
WNMG ○○○○○○TK	B37	Insert (Turning)
WNMG ○○○○○○WP	B35	Insert (Turning)
WNMG ○○○○○○WQ	B35, B44	Insert (Turning)
WNMG ○○○○○○XP	B36, B44	Insert (Turning)
WNMG ○○○○○○XQ	B36, B44	Insert (Turning)
WNMG ○○○○○○XS	B36, B44	Insert (Turning)
WNMG ○○○○○○ZS	B37	Insert (Turning)
WNMM ○○○○○○M	C17	Insert (Turning)
WNMM ○○○○○○M-NE	C17	Insert (Turning)
WNMM ○○○○○○M-SE	C17	Insert (Turning)
WNMP ○○○○○○TK	B35	Insert (Turning)
WOF07R	M25	Spare Parts (Cartridge)
WP-1S	D15, N7, P7	Spare Parts (Shim Pin)
WP5X11	F70, P7	Spare Parts (Shim Pin)
WP5X15	D20, N8, P7	Spare Parts (Shim Pin)
WPGT ○○○○○○M%-Y	B71	Insert (Turning)
WPGT ○○○○○○%-Y	B71, B78	Insert (Turning)
WPGW ○○○○○○	B71	Insert (Turning)
WPMT ○○○○○○	C22	Insert (Turning)
WPMT ○○○○○○GP	B71, B78	Insert (Turning)
WPMT ○○○○○○HQ	B71, B78	Insert (Turning)
WPMT ○○○○○○NE	C22	Insert (Turning)
WSP-1	D15, N7, P19	Spare Parts (Spacer)
WTENN ○○○○□-○ON	D15	Toolholder (Turning)
WTJN% ○○○○□-○ON	D15	Toolholder (Turning)

Description	Page	Category
WTKN% ○○○○□-○ON	D15	Toolholder (Turning)
WTN-33	D15, N7, P11	Spare Parts (Shim)
WTN-33-20	D15, P11	Spare Parts (Shim)
WWLN% ○○○○□-○○	D20	Toolholder (Turning)
WWLN% ○○○○B-○○E	F70	Boring Bar / Previous Description
WWN-42	D20, N8, P11	Spare Parts (Shim)
WWP-42	F70, P11	Spare Parts (Shim)
WWP-42-16	F70, P11	Spare Parts (Shim)
Y		
YPGT ○○○○○○F%-U	B78	Insert (Turning)
YPGT ○○○○○○%-F	B78	Insert (Turning)
Z		
ZCMT ○○○○○○	K37	Insert (Drilling)
ZCMT ○○○○○○SP	K37	Insert (Drilling)
ZCMT ○○○○○○SU	K37	Insert (Drilling)
ZXMT ○○○○○○GM	K22	Insert (Drilling)
ZXMT ○○○○○○GH	K22	Insert (Drilling)
ZXMT ○○○○○○SM	K22	Insert (Drilling)