
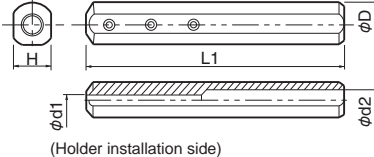


Sleeves for Boring Bars

Sleeves for Boring Bars

Shape	Description	(Previous Description)	Std.	Dimension (mm)					Spare Parts	
				øD	ød1	ød2	H	L1	Screw	Wrench
 <p>(Holder installation side)</p>	SH 0416-100	SH -0516	●	16	4	5	14	100	HS4X4	LW-2
					5	6				
					6	7				
					7	8				
	SH 0820-120	SH -1020	●	20	8	9	18	120	HS4X4	LW-2
					10	11				
					12	13				
	SH 1225-150	SH -1625	●	25	12	13	23	150	HS5X5	LW-2.5
					16	18				
					20	22				
SH 1632-180	SH -2032	●	32	16	18	30	180	HS5X5	LW-2.5	
				20	22					
SH 2032-180	SH -2532	●	32	20	22	30	180	HS5X5	LW-2.5	
				20	22					

Coolant Sleeve Dimension

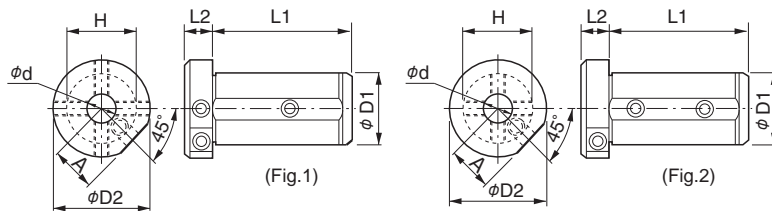

Accessories

Back Cover / SHL-4...SHC○○○40-70
SHL-5...SHC○○○50-95

Back Cover Screw
Shank Clamp Screw

(Note) To stabilize the Toolholder and to prevent coolant leaks, tighten all 4 screws of coolant sleeve securely.

Description	(Previous Description)	Std.	Dimension (mm)							Drawing	Spare Parts						
			øD1	øD2	ød	L1	L2	H	A		Front Screw	Wrench	Back Screw	Wrench	Back Cover	Back Cover Screw	Wrench
SHC 0840-70	SHC-084070	●	40	56	8	70	16	38	27	Fig.1	HS6X22	LW-3	HS6X14	LW-3	SHL-4	HH3X6	LW-2.5
					10												
					12												
					16												
					20												
					25												
SHC 0850-95	SHC-085095	●	50	65	8	95	16	47	30.5	Fig.1	HS6X22	LW-3	HS6X14	LW-3	SHL-5	HH3X12	LW-2.5
					10												
					12												
					16												
					20												
					25												

How to install

