


MECH Shell Mill




Dimensions

Description	Std.	No. of Flute	No. of Stage	No. of Insert	Dimension (mm)									Drawing	Spare Parts				Applicable Inserts  M17						
															Clamp Screw	Wrench	Anti-seize Compound	Mounting Bolt							
																									
MECH 040R-11-4-4T-M		4	4	16	40	16	15	9	50	19	5.6	8.4	37	Fig.1	SB-2555TRG	DTM-8	MP-1	HH8X25	BDMT11T308ER-N2 BDMT11T308ER-N3						
		6	5	30	50	22	18	11	63	21	6.3	10.4	46					HH10X30							
MECH 050R-17-2-4T-M		4	2	8	50	22	18	11	52	21	6.3	10.4	30		Fig.1	SB-4070TRN	DTM-15	MP-1	HH10X30	BDMT170408ER-N3 BDMT170408ER-N4					
		4	4	16					78										59		HH10X40				
063R-17-3-4T-M		4	3	12	63	27	20	14	70	24	7	12	45						Fig.2					HH12X40	
080R-17-4-6T-M		6	4	24	80	32	26	18	85	28	8	14	59											HH16X45	
100R-17-4-6T-M		6	4	24	100	40	56	-	85	30	9	16	59	-											
MECH 063R-17-3-4T		4	3	12	63	25.4	20	14	70	26	6	9.5	45	Fig.1					SB-4070TRN		DTM-15	MP-1	HH12X40		
		6	4	24	80	31.75	26	18	85	32	8	13	59	HH16X45											
		6	4	24	100	38.1	56	-	85	38	10	16	59	Fig.2	-										

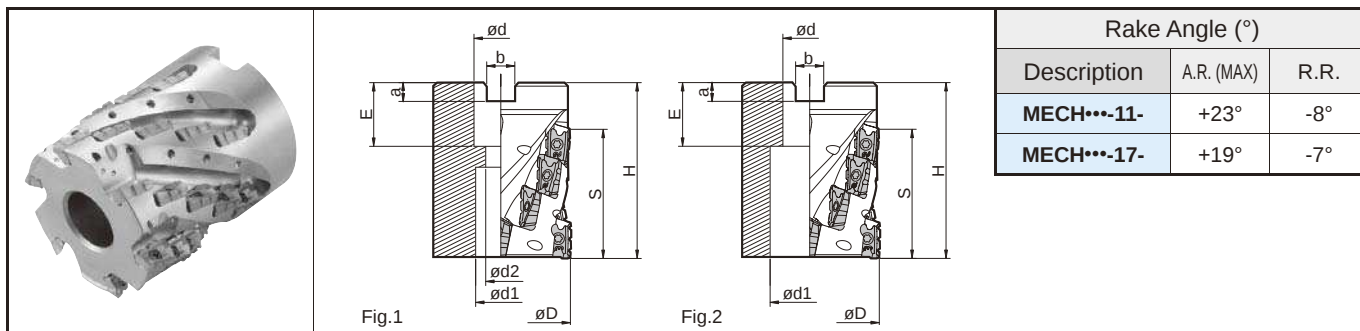

Coat Anti-seize Compound (MP-1) thinly on clamp screw when insert is fixed.

MECH-BT50 / MECH-SK (Integral Arbor type)

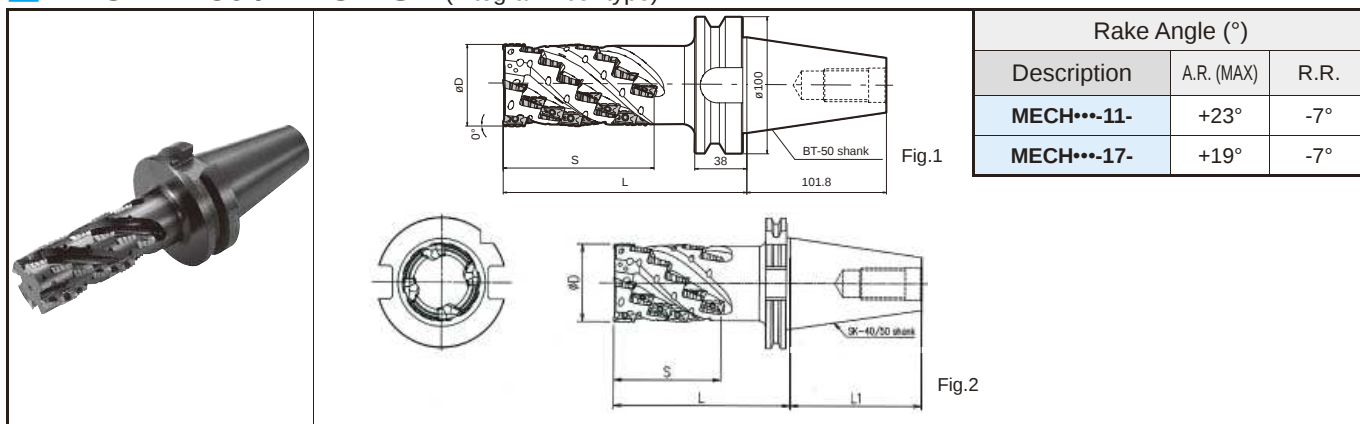

Dimensions

Description	Std.	No. of Flute	No. of Stage	No. of Insert	Dimension (mm)			Drawing	Weight (kg)	Spare Parts			Applicable Inserts  M17
					øD	L	S			Clamp Screw	Wrench	Anti-seize Compound	
													
MECH 050R11-8-4T-BT50		4	8	32	50	143	73	Fig.1	4.8	SB-2555TRG	DTM-8	MP-1	BDMT11T308ER-N2 BDMT11T308ER-N3
MECH 050R17-7-4T-BT50		4	7	28	50	173	104		4.9	SB-4070TRN	DTM-15	MP-1	BDMT170408ER-N3 BDMT170408ER-N4
063R17-7-4T-BT50					63				5.9				
080R17-7-4T-BT50					80				7.8				
100R17-7-6T-BT50		6		42	100				10.2				
MECH 040R11-6-4T-SK40		4	6	24	40	92	55	Fig.2		SB-2555TRG	DTM-8	MP-1	BDMT11T308ER-N2 BDMT11T308ER-N3
MECH 050R11-8-4T-SK50			8	32	50	124	73						BDMT11T308ER-N2 BDMT11T308ER-N3
050R17-7-4T-SK50			7	28		154	104			SB-4070TRN	DTM-15	MP-1	BDMT170408ER-N3 BDMT170408ER-N4



Coat Anti-seize Compound (MP-1) thinly on clamp screw when insert is fixed.

● : Std. Item ○ : Check Availability R : Std. Item (R-hand Only) L : Std. Item (L-hand Only)

