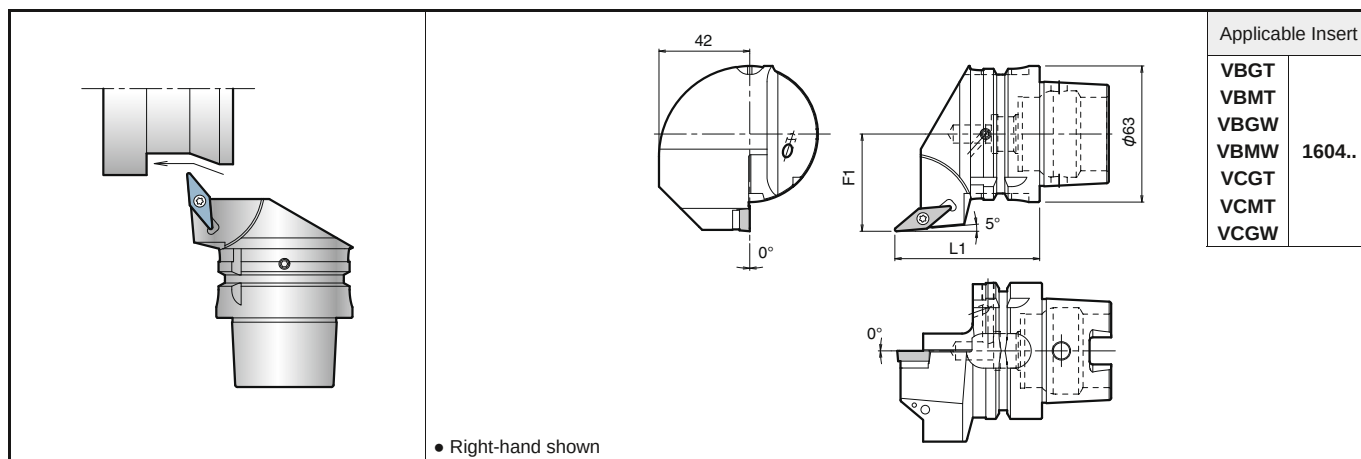
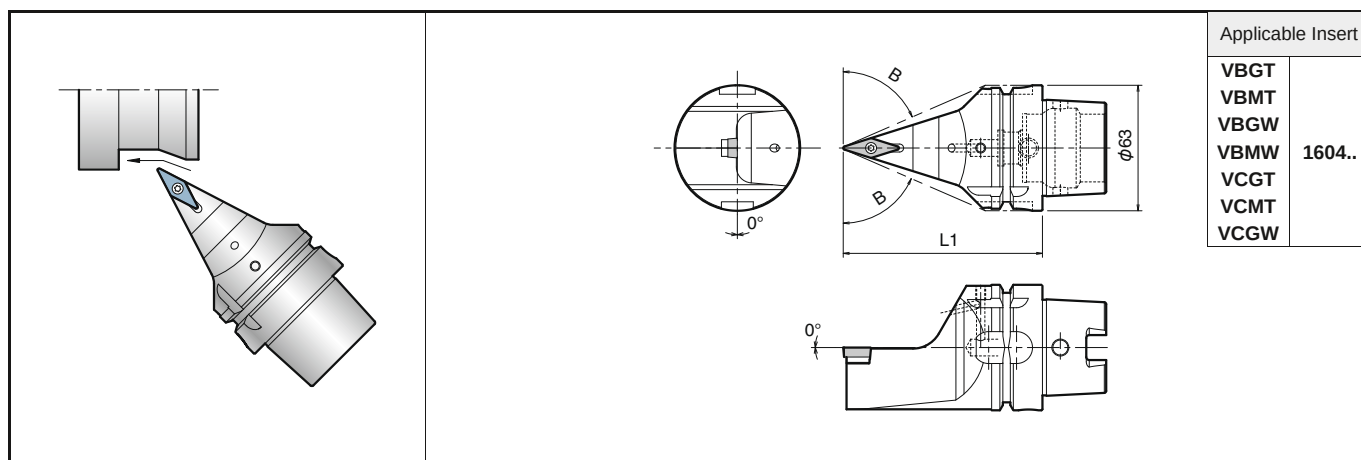


SVLB (External / Copying)

● Toolholder Dimensions

Description	Std.	Dimension (mm)		Spare Parts							
		L1	F1	Clamp Screw	Wrench	Shim	Shim Screw	Wrench (for Shim Screw)	Shim Screw	Wrench	Coolant Pipe
A63-WH- SVLBR-DX16		65	45	SB-40115TR	FT-15	SVN-32	-	-	SB-2050TR	FT-6	CL63-1
SVLBI-DX16											
T63H- SVLBR-DX16N	●	65	45	SB-40125TRN	FT-15	SVN-32N	SS-4N	LW-4	-	-	CL63-1
SVLBI-DX16N	●										

• A63-WH-SVLBI-DX16 will be switched to T63H-SVLBI-DX16N.

SVVB (External / Copying)

● Toolholder Dimensions

Description	Std.	Dimension (mm)		Spare Parts							
		L1	*B (°)	Clamp Screw	Wrench	Shim	Shim Screw	Wrench (for Shim Screw)	Shim Screw	Wrench	Coolant Pipe
A63-WH- SVVBN-H16		100	66.5	SB-40115TR	FT-15	SVN-32	-	-	SB-2050TR	FT-6	CL63-1
SVVBN-L16		140	72.5								
T63H- SVVBN-H16N	●	100	66.5	SB-40125TRN	FT-15	SVN-32N	SS-4N	LW-4	-	-	CL63-1
SVVBN-L16N	●	140	72.5								

* Angle B indicates interference angle made by edge point and toolholder.

• A63-WH-SVVBN-H16 will be switched to T63H-SVVBN-H16N.

• A63-WH-SVVBN-L16 will be switched to T63H-SVVBN-L16N.